

Miscellaneous Information

CD-ROM Drive Jumper/Switch Settings

External Tray Load CD-ROM Drive (Assembly 142250) (Spare Part 199430-001)

Configuration	Default (end of chain)	Middle
Parity	1	1
Sector Size	0	0
Terminator	1	0
Term Power	1	1

Internal Tray Load CD-ROM Drive Jumper Settings (Spare Part 142223-001)

ID Number	Jumper 1	Jumper 2	Jumper 3
0	OFF	OFF	OFF
1	ON	OFF	OFF
2	OFF	ON	OFF
3	ON	ON	OFF
4	OFF	OFF	ON
5	ON*	OFF*	ON*
6	OFF	ON	ON
7	ON	ON	ON
Jumper	Position	Function	
4	ON*	Parity Enable	
4	OFF	Parity Disable	
5	ON	Sector size = 512	
5	OFF*	Sector size = 2048	
6	ON*	Terminator Enable	
6	OFF	Terminator Disable	
7	ON*	Term Power Enable	
7	OFF	Term Power Disable	

* Indicates factory setting.

SCSI ID Numbers

Internal DualSpeed CD-ROM Drive (Spare Part 133881-001)

ID Number	Jumper 0	Jumper 1	Jumper 2
0	OFF	OFF	OFF
1	ON	OFF	OFF
2	OFF	ON	OFF
3	ON	ON	OFF
4	OFF	OFF	ON
5	ON	OFF	ON
6*	OFF	ON	ON
7	ON	ON	ON
Jumpers	Default		
Parity	ON		
SCSI ID Select (Banks 2,3,4)	6		
Prevent/Allow	ON		
Test Mode	Disabled		

* Default.