
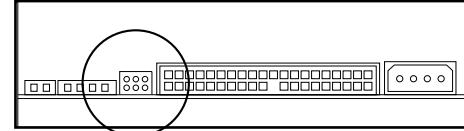


CD-ROM Jumper Settings and Locations

Drive: **24x CD-ROM**

Model: **Max**

Max 24x CD-ROM
Assembly Number 278025-20x

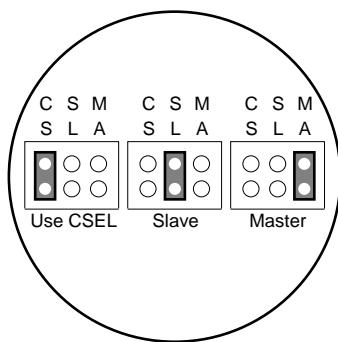


Key


○	Jumper NOT Installed
●	Jumper Installed

CD-ROM Jumper Settings and Locations

Drive: **CD-ROM** Model: **PD**

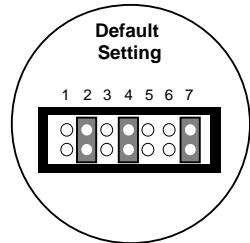


PD/CD-ROM-SCSI
Assembly Number 184689-201

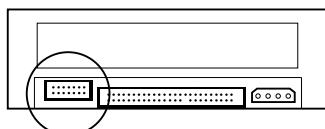


Key Jumper NOT Installed
 Jumper Installed

Drive: **8x CD-ROM** Model: **Hitachi & Panasonic**

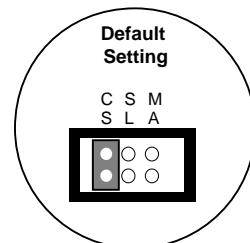


Hitachi and Panasonic 8x CD-ROM
Assembly Numbers 198893-205 and 198893-201

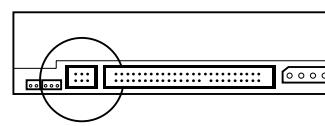


Key Jumper NOT Installed
 Jumper Installed

CD-ROM Jumper Settings and Locations

Drive: **8x CD-ROM** Model: **Sanyo**

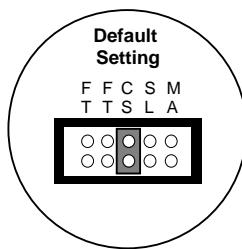


 Sanyo 8x CD-ROM
Assembly Number 198893-202




Key Jumper NOT Installed
 Jumper Installed

Drive: **4x CD-ROM** Model: **Sanyo**

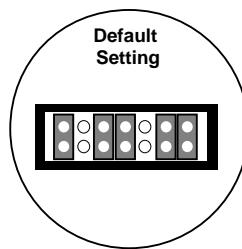

 Sanyo 4x Low Power CD-ROM
Assembly Number 172717




Key Jumper NOT Installed
 Jumper Installed

CD-ROM Jumper Settings and Locations

Drive: **CD-ROM** Model: **PD**

PD/CD-ROM-IDE, R/W ATAPI, GX
Assembly Number 185836-201

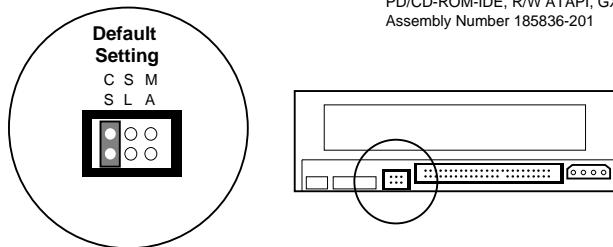

Key Jumper NOT Installed
 Jumper Installed