

Presario 1900

System/Processor Boards	Spare Part	System
System Board w/ Base Pan/Speaker	331414-001	1905, 06, 10, 15, 19, 20

Configuration Code/Model	System Board Spare Part	Model
CF76	331414-001	1919
CFL2	331414-001	1915
CFL3	331414-001	1905
CFL4	331414-001	1906
CFL5	331414-001	1910
CFM2	331414-001	1920
CFM3	331414-001	1920
CFM4	331414-001	1920
CFM6	331414-001	1920

Microprocessors	Spare Part	System
PII/266	400779-001	1915
CII/266, 128K	102422-001	1905, 06, 10
CII/300, 128K	102268-001	1919
PII/300	400780-001	1920

Hard Drives	Spare Part	System
4.0 GB, IDE	331415-001	1905, 06, 10, 15, 20
6.0 GB, IDE	331416-001	1919, 20

Diskette Drives	Spare Part	System
1.44 MB w/ IF Cable	331428-001	1905, 06, 10, 15, 19, 20

CD-ROM	Spare Part	System
DVD w/ Interface Connection	331427-001	1915, 19, 20
24X	102122-001	1905, 06, 10

Cables	Spare Part	System
Cable Assembly	102422-001	1905, 06, 10, 15, 19, 20

Miscellaneous	Spare Part	System
AC Adapter, 45W	358976-001	1905, 06, 10, 15, 19, 20
Board, 13.3" Interface	331411-001	1905, 06, 10, 15, 19, 20
Board, IDE w/ RTC Battery	331412-001	1905, 06, 10, 15, 19, 20
Board, Voltage Regulator	331413-001	1905, 06, 10, 15, 19, 20

Continued

Presario 1900

Miscellaneous	Spare Part	System
Plastic/Hardware Kit, Misc.	331418-001	1905, 06, 10, 15, 19, 20
Keyboard	331419-001	1920
Speakers	331420-001	1905, 06, 10, 15, 19, 20
Fan	331410-001	1905, 06, 10, 15, 19, 20


Modem	Spare Part	System
56K w/ Shielding	331429-002	1905, 06, 10, 15, 19, 20
56K w/ Shielding, International	331429-002	1920

Video	Spare Part	System
Display Panel, 12.1" TFT	331408-001	1905, 06, 15
Display Panel, 13.3" TFT	331409-001	1910, 19, 20

Battery	Spare Part	System
Battery, Li-Ion	386500-001	1905, 06, 10, 15, 19, 20

Presario 1900

Memory Upgrade Chart

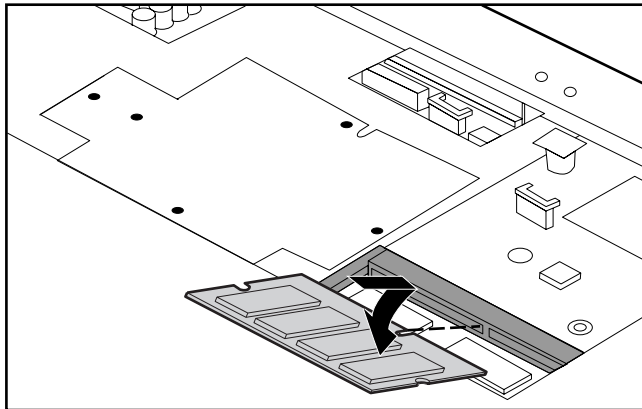

ADD ANY ONE OF THE FOLLOWING MEMORY BOARDS

32-MB SDRAM OPTION PN 293821-002

64-MB SDRAM OPTION PN 293822-002

128-MB SDRAM OPTION PN 401040-B21