

Rack-Mountable ProLiant 1850R

System/Processor Boards	Assembly	Spare Part
System I/O Board, w/o Processor	007823-101	333110-001

SW1 Switch Settings (007823)

SW	Function	Default Position
S1	VIDEO DISABLE	OFF
S2	CONFIGURATION LOCK	OFF
S3	RACK-MOUNTABLE CHASSIS	ON
S4	DISKETTE BOOT OVERRIDE	OFF
S5	PASSWORD DISABLE	OFF
S6	MAINTENANCE	OFF

SW2 Switch Settings (007823)

SW	Function	Default Position		
		350 MHz	400 MHz	450 MHz
S1	Processor Core Frequency	ON	ON	ON
S2	Processor Core Frequency	ON	OFF	OFF
S3	Processor Core Frequency	OFF	ON	ON
S4	Processor Core Frequency	OFF	ON	OFF
S5	Reserved	OFF = Default		
S6	Reserved	OFF = Default		

ProLiant 1850R Configuration Codes

Model	System Board Spare Part	Config. Code
1850R/400	333110-001	BZQ3

Jumper Settings For SCSI-ID *

SCSI ID **	Bit 2	Bit 1	Bit 0
6	ON	ON	OFF
5	ON	OFF	ON
4	ON	OFF	OFF
3	OFF	ON	ON
2	OFF	ON	OFF
1	OFF	OFF	ON
0	OFF	OFF	OFF

* It is not necessary to set the SCSI ID jumpers on a replacement drive. The SCSI ID is set automatically by the backplane when the drive is installed.

** SCSI ID's for bays 0-4 are preset to 0-4 respectively. No two drives can have the same SCSI ID.

Microprocessors	Assembly	Spare Part
686/400	278309-002	313624-001
	269609-001	
	243199-002	
PII/400		313624-001

Memory Boards/Modules	Assembly	Spare Part
32 MB SDRAM Memory Module	306430-001	317747-001
64 MB SDRAM Memory Module	333143-001	317745-001
256 MB SDRAM Memory Module	306432-001	317749-001
128 MB SDRAM Memory Module	306431-001	317756-001
Processor Power Module		327660-001

Rack-Mountable ProLiant 1850R

Controller Boards	Spare Part
Remote Insight Board	294040-001

Miscellaneous Internal	Assembly	Spare Part
Fan	327412-001	327308-001
Voltage Regulator Board	327563-001	327660-001
Expansion Board, 3 PCI, w/o I20 w/ Brace	007820-001	333109-001
Backplane Board, Power Supply	007829-001	333112-001
Backplane Board, w/ Drive Cage	007826-001	333111-001
	333119-001	
Drive Cage, LVD, 2 Drive Capability	388658-001	401529-001
SCSI Simplex Board, LVD	010060-001	387090-001

Miscellaneous External	Assembly	Spare Part
See "Rack Mountable ProLiant Storage System" section for information on:		
* External hot-pluggable hard drives		
* Stand-By Recovery Server Option and cables		
* On-Line Recovery Server Option and cables		
See "Rack Mountable SCSI Storage Expander" section for information on:		
* External non-pluggable hard drives		
* External tape drives		
Power Switch w/ Cable and LED	333347-001	327312-001
Keyboard, US		160648-101

Hard Drives	Spare Part
4.3 GB Hot-Pluggable Wide Ultra SCSI-3	295680-B21

CD-ROM Drives	Assembly	Spare Part
CD Drive Adapter Board	007567-001	167208-001
24X, IDE, 12.7	314933-509	327921-001
	327548-001	
CD Ethernet Cluster PDC/O1000	387733-001	400110-001

Diskette Drives	Assembly	Spare Part
1.44 MB (standard)	184806-101	288456-001


Cables	Assembly	Spare Part
Cable Kit, Power, Misc	333342-001	327919-001
	333343-001	
	333344-001	
Cable Kit, Signal, Misc	296016-003	327920-001
	296016-004	
	171886-002	
	242947-009	

Power Supply/Battery	Assembly	Spare Part
Battery, Replacement	160255-001	160274-001
Power Supply, 225 W, Red, Hot Plug	283606-001	283623-001


Rack-Mountable ProLiant 1850R

Memory Upgrade Chart

PROCESSOR BOARD
007823-001
(64 MB)

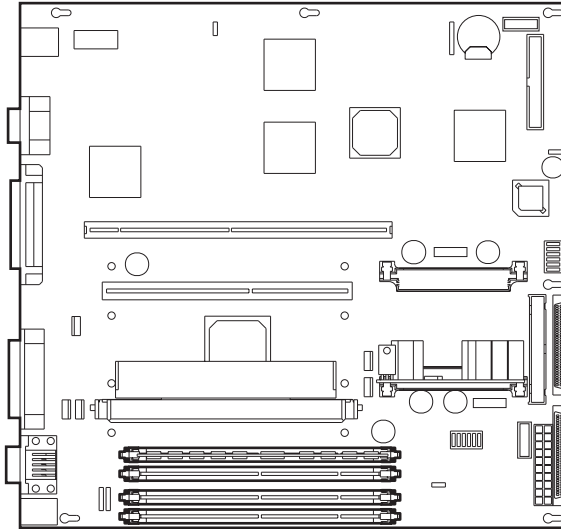

A MAXIMUM OF 1 GB TOTAL MEMORY.

 

32-MB 100MHz SDRAM DIMMs - OPTION PN 313613-B21

64-MB 100MHz SDRAM DIMMs - OPTION PN 313614-B21

128-MB 100MHz SDRAM DIMMs - OPTION PN 313615-B21

256-MB 100MHz SDRAM DIMMs - OPTION PN 313616-B21