
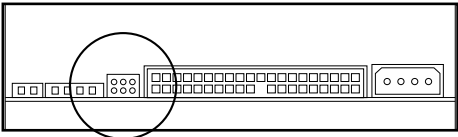


CD-ROM Jumper Settings and Locations

Drive: 24x CD-ROM

Model: Max

Max 24x CD-ROM
Assembly Number 278025-20x


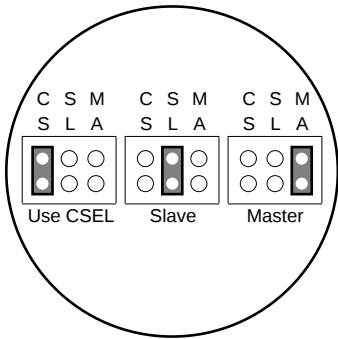


Key ○ Jumper NOT Installed
● Jumper Installed

CD-ROM Jumper Settings and Locations

Drive: **CD-ROM** Model: **PD**



PD/CD-ROM-SCSI
Assembly Number 184689-201

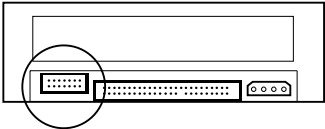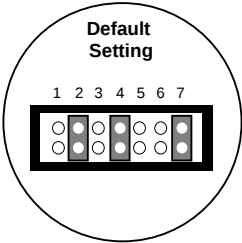

Key ○ Jumper NOT Installed
 ● Jumper Installed

Drive: **8X CD-ROM** Model: **Hitachi & Panasonic**

 Hitachi and Panasonic 8x CD-ROM
Assembly Numbers 198893-205 and 198893-201


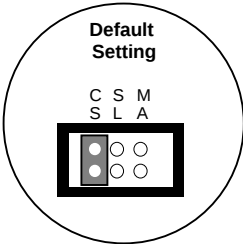


Key ○ Jumper NOT Installed
 ● Jumper Installed

CD-ROM Jumper Settings and Locations

Drive: **8x CD-ROM** Model: **Sanyo**

 

Sanyo 8x CD-ROM
Assembly Number 198893-202

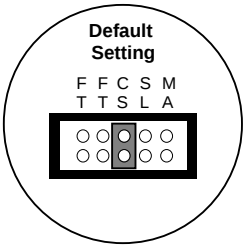

Key  Jumper NOT Installed
 Jumper Installed

Drive: **4x CD-ROM** Model: **Sanyo**

 Sanyo 4x Low Power CD-ROM
Assembly Number 172717

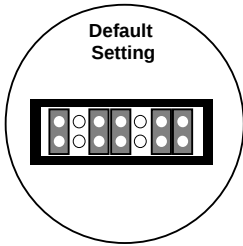

Key  Jumper NOT Installed
 Jumper Installed

 
CD-ROM Jumper Settings and Locations


Drive:CD-ROM

Model:PD

PD/CD-ROM-IDE, R/W ATAPI, GX
Assembly Number 185836-201

Default
Setting
C S M
S L A



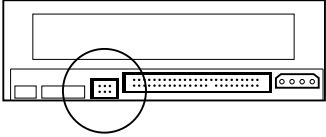

Key

 Jumper NOT Installed

 Jumper Installed