


LS-120 Drive Jumper Settings and Locations

Diskette Drive: **120 MB**

Model: **LS-120**

LS-120 MB Diskette Drive
Assembly Number 184932

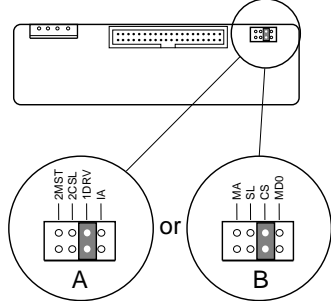

Key ○ Jumper NOT Installed
● Jumper Installed

A Configuration	1A	1DRV	2CSL	2MST
Cable-Select	○	○	●	○
Device 0 (master)	○	○	○	●
Device 1 (slave)	○	○	○	○

Jumper 1A is for factory use only.
Jumper 1DRV does not need to be used.

B Configuration	MD0	CS	SZ	MA
Cable-Select	○	●	○	○
Device 0 (master)	○	○	○	●
Device 1 (slave)	○	○	●	○

Jumper MD0 is for factory use only.