

# Deskpro 4000N

System Boards	Assembly	Spare Part	System
Board w/o Processor	007602-101	306425-001	Date XXX7 or before
Board w/o Processor	008074-101	288507-001	Date XXX8 or later
Board w/o Processor, Brazil	007602-201	306425-201	Date XXX7 or before
New PCA, Brazil	008074-201	288507-201	Date XXX8 or later

Note: To avoid injury from electric shock and/or hot surfaces and to prevent damage to the system board and/or interface boards (such as NICs, video controllers, and memory), unplug the AC power cord from the wall outlet and allow the internal components of the PC to cool before servicing the unit.

## Configuration Jumper, System Board (007602-001, 008074-101)

Jumper	Function	Setting	Description
P14	Battery; Clear CMOS	1 – 2	Internal Battery Jumper (Default)
		2 – 3	Clear CMOS*
		9 – 12	External Battery Header**

\* A/C must also be removed.

\*\* Connecting the external battery automatically disconnects the internal battery.

## SW1, Speed Settings, System Board (007602-001, 008074-101)

BUS Proc. Speed	S1	S2	S3	S4	S5	S6
166 MHz	*	ON	ON	OFF	ON	**
200 MHz	*	OFF	ON	OFF	ON	**
233 MHz	*	OFF	OFF	OFF	ON	**

\* S1 = Power-On Password Feature. ON = Disable; OFF = Enable.

Default is OFF/Enabled.

\*\* S6 = A/C ON Feature. ON = Enable; OFF = Disable.

Default is OFF/Disabled.

CONFIGURATION CODE TABLE			
Configuration Code	Assembly	System Bd Spare Part	System
BQ22 – BQ23	*	*	5200MMX
BQZ2 – BQZ3	*	*	5166MMX
BSS2 – BSS3	*	*	5233MMX

\* See System Boards Table above to order the correct system board.

Microprocessors	Spare Part	System
586, 166/66	288460-001	P55C/166
586, 200/66	288459-001	P55C/200
586, 233/66	286258-001	P55C/233
Heat Sink w/ Clip and Pad	288473-001	All

# Deskpro 4000N

Memory	Spare Part	System
8 MB, SDRAM, DIMM	288438-001	All
16 MB, SDRAM, DIMM	278066-001	All
16 MB, SDRAM, DIMM, ECC	278097-001	All
32 MB, SDRAM, DIMM	278067-001	All
32 MB, SDRAM, DIMM, ECC	288440-001	All
64 MB, SDRAM, DIMM	278095-001	All
64 MB, SDRAM, DIMM, ECC	278098-001	All
128 MB, SDRAM, DIMM	278096-001	All
128 MB, SDRAM, DIMM, ECC	278099-001	All

Note: To avoid injury from electric shock and/or hot surfaces and to prevent damage to the system board and/or interface boards (such as NICs, video controllers, and memory), unplug the AC power cord from the wall outlet and allow the internal components of the PC to cool before servicing the unit.

Miscellaneous	Assembly	Spare Part	System
Backplane w/ Bracket	007495-001	306426-001	All
Hood Assembly		308348-001	All
Keyboard, Spacesaver	166516-001	166514-001	All
Mouse, Two-Button	141649-004	141189-401	All
Mounting Bracket, System		288461-001	All

Controller Boards	Assembly	Spare Part	System
AUI/BNC Adapter	142858-002	192768-001	All
Controller	296628-001	296478-001	All
USCSI, PCI, Plug and Play	185202-001	247399-001	All

Note: To avoid injury from electric shock and/or hot surfaces and to prevent damage to the system board and/or interface boards (such as NICs, video controllers, and memory), unplug the AC power cord from the wall outlet and allow the internal components of the PC to cool before servicing the unit.

Hard Drives	Spare Part	System
1.6 GB, IDE	308347-001	All
2.1 GB, IDE	288449-001	All

Cables	Spare Part	System
2-Dev w/ Term, A	184118-001	All
Audio, SoundBlaster	294170-001	All
Hard Drive Cable	288442-001	All
Null Modem Cable	118773-001	All
RJ 45 Connector	290663-001	All
SCSI, LED, SH	247485-001	All


## ROM Information (All systems)

System ROMPaq

Battery/Power Supply	Spare Part	System
Battery, Alk, 4.5v, 600ma, RTC	160274-001	All
Power Supply, 76 W	288329-001	All

# Deskpro 4000N

## Memory Upgrade Chart

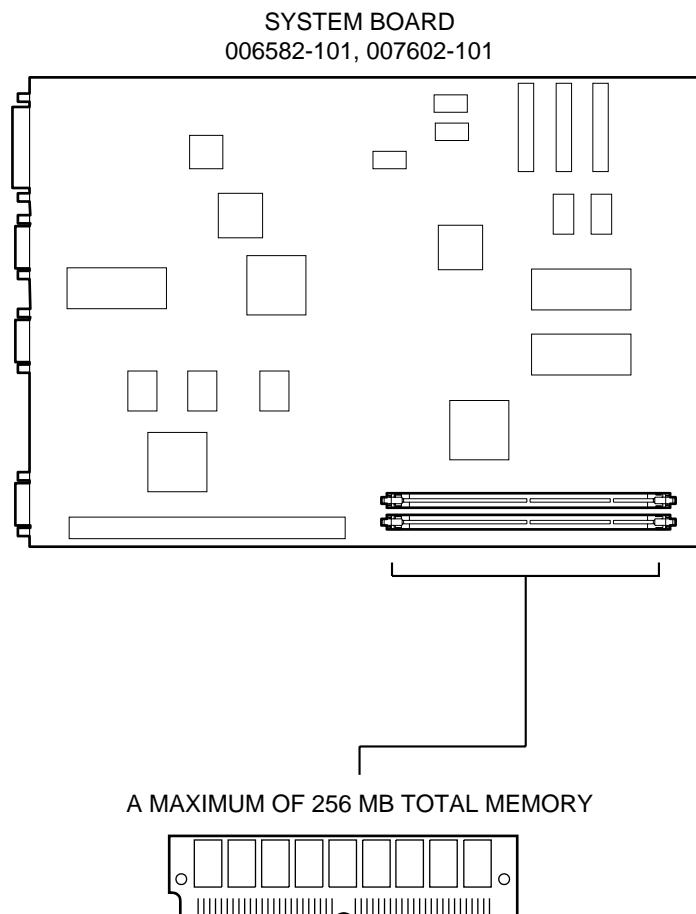

8-MB 66MHz DIMMS, SDRAM - OPTION PN 242802-B21

16-MB 66MHz DIMMS, SDRAM- OPTION PN 242803-B21

32-MB 66MHz DIMMS, SDRAM - OPTION PN 242804-B21

64-MB 66MHz DIMMS, SDRAM - OPTION PN 242805-B21

128-MB 66MHz DIMMS, SDRAM - OPTION PN 270812-B21