

ESL9198DLX DLT Library

Controller Boards	Spare Part
Controller, Robotic	154847-001
SCSI Communication	154849-001

Configuration Code	Model
DLQ1	ESL9000 Pass Thru Mechanism
FN1P	198 Slot Tape Library w/ 0 40/80 DLT Drive
FN3P	198 Slot Tape Library w/ 4 40/80 DLT Drives
FN4P	198 Slot Tape Library w/ 8 40/80 DLT Drives
FXQ1	40/80 Drive Add on for ESL9XXX LVD
JDR2	LVD Extender for ESL9XXX

Tape Drives/Cartridges	Spare Part
8000 DLT, LVD	224893-001

Miscellaneous	Spare Part
AC Distribution Assembly	154845-001
Belt	224889-001
Belt, Y axis, One- Inch	154864-001
Board, Backplane, Robotics	154850-001
Board, Drive Interface, Slot CL1	190711-001
Board, Motor Power Converter	154858-001
Board, Rotary Axis Sensor	154857-001
Board, System Status	154866-001
Board, X Axis Interconnect	154855-001
Board, Y Axis Interconnect	154856-001
Driver, Actuator	154848-001
Extender, SCSI, LVD toLVD	224891-001
Extension, Axis	224888-001
Graphical User Interface (GUI) Display Panel	154851-001
Library Supply Kit	158908-001
Loadpack	154867-001
Loadport	224892-001
Modules, Redundant Fan	154846-001
Motor, Rotary, Axis Stepper	154854-001
Motor, X-Axis	224890-001
Motor, X/Y Axis Stepper	154853-001
Pass-Through Mechanism (PTM)	180668-001
Tool, Service	158909-001

Cables	Spare Part
StorageWorks PTM Cable, Interconnect	180669-001

Power Supply	Spare Part
Power Supply, Hot-Pluggable	154843-001
Power Supply, P2000	224887-001