

Presario 400

System Boards	Assembly	Spare Part
486SX/25 w/ Modem & Game Port	003266-001	160614-001
486SX/25 w/ Game Port & No Modem	003266-004	160614-002*
486SX/33 w/ Modem & Game Port	003614-001	163628-001
486SX/33 w/ Game Port & No Modem	003614-002	163628-002 * DISCONTINUED
486SX/66 w/ Modem & Game Port	004463-001	189375-001** DISCONTINUED
486SX/66 w/ Game Port	004463-002	189375-002* DISCONTINUED

* Outside North America. ** Canada Only

Jumper Settings (Assembly 003266, 003614, 004463)

Jumper	Function	Pins *	Function
P1	Speed Select	1,2	Select processor speed (25 or 50 MHz)
		2,3	Select processor speed (33 or 66 MHz)
P2	Processor Upgrade Socket Select	1,2 PQFP *	Socket not used
		2,3 PGA *	Socket used
P3, P4	Processor Select	1,2	486SX (PQFP) ** 486DX ** 486DX2 ** 487SX *** Overdrive ***
		2,3	486SX (PGA)
P5		1,2	486SX (PQFP) ** 486DX ** 486DX2 ** 487SX *** Overdrive ***
		2,3	486SX (PGA)
P6	Clear CMOS and Password	3,4	Remove and replace jumper P6 to clear CMOS.
P7	Modem ROM Select (if P7 is installed)	1,2	Internal Modem ROM
		2,3	External Modem ROM
J16	Replacement Battery Connector		Use only 4.5v Alkaline computer battery.

* The 486SX (PQFP) is soldered to the board (no socket). All other type PGA processors plug into the processor socket.

** ODP. R.

*** ODP.

Memory SIMMs	Assembly	Spare Part
1 MB Memory Module	118666-004	141752-001 DISCONTINUED
2 MB Memory Module	118667-004	141753-001
4 MB Memory Module	118665-004	141754-001
8 MB Memory Module	129041-002	141755-001

Microprocessors	Spare Part
486DX/33	194495-001
486DX2/50	163661-001
486DX2/66	194395-001

Presario 400

Controller Boards	Assembly	Spare Part
6260 SCSI-2 Controller Board *	004004	146993-001
Serial/Parallel Interface *	000990	106886-001

* See Multiproduct Boards Appendix, for settings.

Miscellaneous Internal	Spare Part
Backplane (2-slot)	160676-001
Monitor Kit (non-MPRII)* - 3200	160726-001
Monitor Kit ** - 3210	160726-005
Monitor Kit ** - 3220	160726-005
Monitor Kit *** - 3220	160726-004

* North America, Latin America, Asia-Pacific. Includes Power Supply.

** Europe. Includes Power Supply.

*** Australia/New Zealand (Southern Hemisphere). Includes Power Supply.

Hard Drives	Type	Inter-leave	Inte-grated	Min ROM	Spare Part
100 MB	32	1:1	Y	063093	160701-001
200 MB	51	1:1	Y	063093	160702-001
					DISCONTINUED
240 MB	1	1:1	Y	063093	129490-001
					DISCONTINUED
340 MB	63	1:1	Y	063093	171923-001
					DISCONTINUED

CD-ROM Drives	Spare Part
DualSpeed External CD-ROM	133882-001
DualSpeed External Tray Load CD-ROM	199430-001

Diskette Drives	Spare Part
1.44 MB Beach Gray	160788-201

Cables	Used With	Spare Part
Drive Power Cable	All Drives	160745-001
Drive Signal Cable	Hard Drive	160744-001
Drive Signal Cable	Diskette Drive	160743-001
LED Cable	Lights	160742-001

Processor/Coprocessor Locations	
Processor (486SX/25)	Coprocessor (487SX-25)
U50	U50


System/Video ROM (486C1)		
Revision	Number on ROM	Spare Part
	160730-007	160792-001

Battery	Spare Part
Battery, Alkaline 4.5 Volts, 600 mA	160274-001


Presario 400

Memory Upgrade Chart

PROCESSOR BOARD WITH 4 MB MEMORY
(003266, 003614)

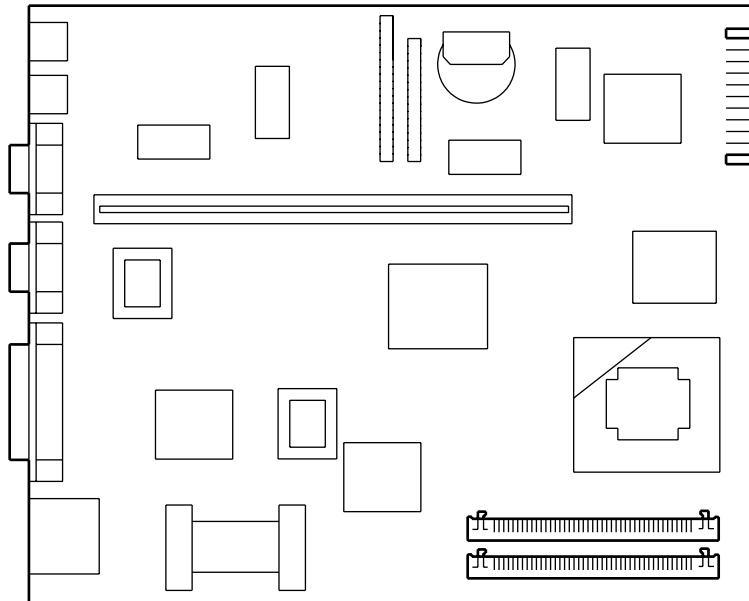

ADD THE FOLLOWING IN ANY
COMBINATION UP TO 20 MB

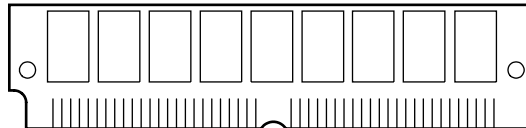

1-MB MEMORY MODULE
SPARE PN 141752-001

2-MB MEMORY MODULE
OPTION PN 141683-001

4-MB MEMORY MODULE
OPTION PN 141684-001 OR 163679-001

8-MB MEMORY MODULE
OPTION PN 141685-001 OR 163680-001