

ProLiant 8000

System Boards	Assembly	Spare Part
Processor Board w/ Tray	303967-001	126973-001
System I/O Board	303968-001	126982-001

Core Frequency Switch Settings (SW2 and SW3)

Processor (MHz)	S1	S2	S3	S4
400 MHz	ON	ON	OFF	ON
450 MHz	OFF	ON	OFF	ON
500 MHz	ON	OFF	OFF	ON
550 MHz	OFF	OFF	OFF	ON
ROM	OFF	OFF	OFF	OFF

Configuration Code	System Board Spare Part
CB75	126982-001 126973-001
CB76	126982-001 126973-001
CB77	126982-001 126973-001
CB78	126982-001 126973-001
CB79	126982-001 126973-001
DF21 (APD)	126982-001 126973-001

Microprocessors	Spare Part
500/100, 512K w/ Heat Pipe	122217-001
500/100, 1 MB w/ Heat Pipe	122218-001
500/100, 2 MB w/ Heat Pipe	122219-001
550/100, 512K	153096-001
550/100, 1 MB	153097-001
550/100, 2 MB	153098-001
700 MHz, PIII Xeon w/ 1 MB Cache and Heat Pipe	178943-001
700 MHz, PIII Xeon w/ 2 MB Cache and Heat Pipe	178944-001

Memory Boards/Modules	Assembly	Spare Part
128 MB, 100 SDRAM, CL2	110957-022	146488-001
256 MB SDRAM, CL2 (64 Mb)	110958-022	170514-001
512 MB SDRAM, CL2 (256 Mb)	110959-042	170515-001
512 MB SDRAM, CL3 (128 Mb)	110959-031	170516-001
512 MB SDRAM, CL3 (256 Mb)	110959-041	170517-001
Memory Board	007349-001	122215-001

Controller Boards	Assembly	Spare Part
3CH, Ultra-Array, Fibre Channel	400503-001	401858-001
PCI 64 Board, Dual 10/100 I-Base	009542-001	338478-001

Miscellaneous Internal	Assembly	Spare Part
Board, Backplane w/ Drive Cage	328663-001	126994-001
Board, Hot-Plug Power Backplane, w/ Cable	303930-002	150580-001
Board, Power Backplane	303930-001	126975-001
Board, Switch, Hot-Plug	303918-001	126981-001
Board, Tag RAM, Cache Accelerate	125425-001	143887-001

Continued

ProLiant 8000

Miscellaneous Internal	Assembly	Spare Part
ENET Loopback RJ45	317463-001	317465-001
Fan Cage Assembly, Upstairs, AT	312125-002	153312-001
Fan, Front, Hot-Plug	303863-001	126989-XXX
	303863-002 (beach gray)	
Fan, Front, Redundant	303860-001	126990-001
Fan, Processor, Hot-Plug	303867-001	126987-001
Fan, Processor, Redundant	303866-001	126988-001
Processor Guide, Upper and Lower		126972-001
Terminator Board	312307-003	312334-001
Terminator Board (700 MHz PIII Xeon Upgrade Kit)		122224-001
Voltage Regulator Board, Redundant	303870-002	312257-001

Miscellaneous External	Spare Part
Handle w/ Pivot Brackets, External	150581-001
See "ProLiant Storage System" section for information on:	
*External hot-pluggable hard drives	
*On-Line Recovery Server Option and cables	
*Stand-By Recovery Server Option and cables	
See "SCSI Storage Expander" section for information on:	
*External non-pluggable hard drives	
* External tape drives	

Hard Drives	Assembly	Spare Part
18.0 GB Wide-Ultra 2, 1", SCA	388136-001	104663-001
18.0 GB Wide-Ultra 2, 10K, 80 Pin	128424-001	143920-001
9.1 GB Wide-Ultra 2, 1", 80 Pin	123066-001	104665-001
9.1 GB Hot-Pluggable Wide-Ultra 2, 10K , SCA	349537-001	386536-001
4.3 GB Wide-Ultra 1", w/ Tray	272581-001	242622-001
4.3 GB SCA	336365-001	336380-001
Blank Tray	349448-001	122759-001

CD-ROM/Diskette Drives	Assembly	Spare Part
CD-ROM/Diskette Drive, Slimline	328066-001	126974-001

Cables	Assembly	Spare Part
Cable Interlock Switch	296700-002	400256-001
Kit, Misc Power		126986-001
Kit, Misc Power		150582-001
Kit, Misc Signal		126985-001
Kit, SCSI A-B-C Relay (4 x 68 position)		400100-001
Power Switch w/ Cable and LED	273360-003	126977-001


Battery/Power Supply	Assembly	Spare Part
Battery Alk, 4.5v, 600ma	160255-003	160274-001
Power Supply, 1150W, Hot-Plug	303989-001	122235-001

ProLiant 8000


Memory Upgrade Chart

MEMORY EXPANSION BOARD

Assembly 007349-001

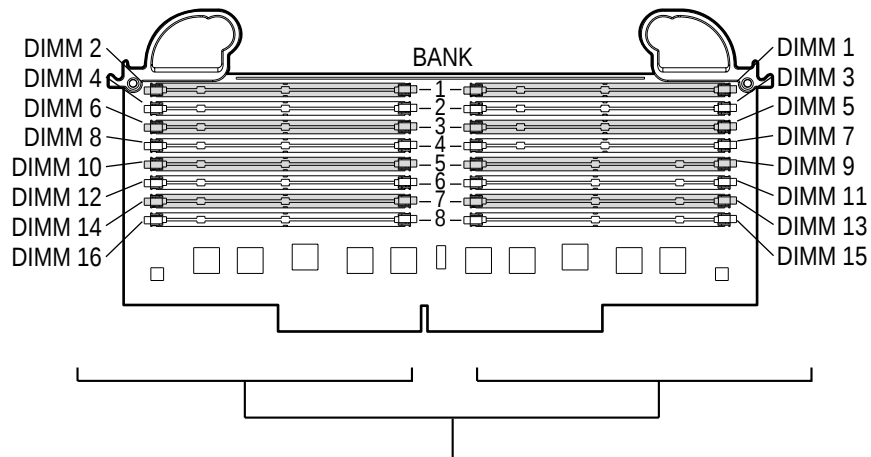

 A MAXIMUM OF 16 GB TOTAL MEMORY
THERE ARE TWO DIMM SOCKETS TO A BANK
BOTH DIMMs IN A BANK MUST BE INSTALLED AT
THE SAME TIME AND BE THE SAME SIZE, TYPE, AND SPEED



256-MB 100 MHz SDRAM DIMMs - OPTION PN 328806-B21

512-MB 100 MHz SDRAM DIMMs - OPTION PN 328807-B21

1-GB 100 MHz SDRAM DIMMs - OPTION PN 328808-B21

NOTE: The ProLiant 8000 will support 1-GB DIMMs when available