

Deskpro 4000

System Boards	Assembly	Spare Part	System ¹
System Board, P5, w/ Video	005580-101	247382-001	T1
System Board, P5, w/ Video, w/ BNC	006178-301	247383-001	T1
System Board, P6, w/o Video	005468-101	247386-001	T1
System Board, P6, w/o Video, w/ BNC	006180-301	247387-001	T1
System Board, P6, 3.5V, w/o Video	007130-101	283946-001	T1
Sys Bd Pent II, 512KB Cache w/ BNC	007326-301	283979-001	T1
Sys Bd Pent II, 512KB Cache no BNC	006650-101	283957-001	T1
Sys Board, P55C, w/o Audio, 512K	007426-101	296682-001	T2
Sys Board, P55C, w/o Audio, 512K	008068-101	326969-001	T2 ²
System Board, P55C, w/ Audio, 512K	007294-101	296687-001	T2
System Board, P55C, w/ Audio, 512K	008067-101	326968-001	T2 ²
System Board, P55C, w/ Audio, 1 MB	007446-101	166578-001	T2
System Board, P55C, w/ Audio, 1 MB	008069-101	326970-001	T2 ²
System Board, PII, w/ Audio	007047-101	296669-001	T3
System Board, PII, w/o Audio	007048-101	166566-001	T3
System Board, PII, w/ Audio	008096-101	322734-001	T3, T4
System, Board, PII w/o Audio	008219-101	322742-001	T3, T4

¹ To differentiate between systems, refer to the configuration code tables. "T1" in the "System" column indicates products using config codes in "Configuration Code Table 1". "T2" in the "System" column indicates products using config codes in "Table 2". The "System" column indicates products using config codes in "Table 4".

² Ship "T3" in the "System" column indicates products using config codes in "Table 3". "T4" in ped after 4Q, 1997.

Configuration Jumpers, Pentium System Boards (005580, 006178)

Jumper	Function	Setting	Description
J11	Battery	6 - 7	Internal (on-board) Battery Jumper
		5 - 6	External Battery Jumper
		1 - 4	External Battery

Configuration Jumpers, Pentium Pro/Pentium II System Boards (005468, 006180, 007130, 006650, 007326)

Jumper	Function	Setting	Description
E2	Battery	6 - 7	Internal (on-board) Battery Jumper
		5 - 6	External Battery Jumper
		1 - 4	External Battery

Configuration Jumpers, MMX System Boards (006627, 007047, 007048, 007294, 007426, 007446, 008068, 008067, 008069)

Jumper	Function	Setting	Description
E50	Battery	1 - 2	Internal Battery Jumper (Default)
		2 - 3	External Battery Jumper
		5 - 6	Clear CMOS*
		9 - 12	External Battery Header

* A/C must also be removed.

SW1, Speed Settings, Pentium System Boards (005580, 006178)

BUS Proc. Speed	S1	S2	S3	S4
100 MHz	*	OFF	OFF	ON
120 MHz	*	ON	OFF	OFF
133 MHz	*	ON	OFF	ON
166 MHz	*	ON	ON	ON
200 MHz	*	OFF	ON	ON

* S1 = Power-On Password Feature. ON = Disable. OFF = Enable. Computer is shipped in the OFF/Enabled position.

Deskpro 4000

SW1, Speed Settings, Pentium Pro System Boards (005468, 006180, 007130)

BUS Proc. Speed	S1	S2	S3	S4	S5	S6
180 MHz	*	OFF	ON	ON	OFF	ON
200 MHz	*	ON	ON	ON	OFF	ON

* S1 = Power-On Password Feature. ON = Disable. OFF = Enable.
Computer is shipped in the OFF/Enabled position.

SW1, Speed Settings, Pentium II System Boards (006650, 007326)

BUS Proc. Speed	S1	S2	S3	S4	S5	S6	S7
200 MHz	*	OFF	ON	ON	ON	OFF	ON
233 MHz	*	OFF	ON	ON	ON	OFF	OFF
266 MHz	*	OFF	ON	ON	OFF	ON	ON

* S1 = Power-On Password Feature. ON = Disable. OFF = Enable. Computer is shipped in the OFF/Enabled position.

SW1, Speed Settings, Pentium System Boards w/MMX (007294, 007426, 007446, 008068, 008067, 008069)

BUS Proc. Speed	S1	S2	S3	S4	S5	S6
66/166 MHz	*	ON	ON	**	ON	***
66/200 MHz	*	OFF	ON	**	ON	***
66/233 MHz	*	OFF	OFF	**	ON	***

* S1 = Power-On Password Feature. ON = Disable. OFF = Enable. Computer is shipped in the OFF/Enabled position.

** S4 = Unused. Computer is shipped in the OFF position.

*** S6 = A/C ON Feature. ON = Enable. OFF = Disable. Computer is shipped in the OFF/Disabled position.

SW1, Speed Settings, Pentium II System Boards (006627, 007047, 007048, 008096, 008219)

BUS Proc. Speed	S1	S2	S3	S4	S5	S6
66/233MHz	*	OFF	OFF	ON	ON	**
66/266 MHz	*	ON	ON	OFF	ON	**
66/300 MHz	*	ON	OFF	OFF	ON	**
66/333 MHz	*	OFF	ON	OFF	ON	**

* S1 = Power-On Password Feature. ON = Disable. OFF = Enable. Computer is shipped in the OFF/Enabled position.

** S6 = A/C ON Feature. ON = Enable. OFF = Disable. Computer is shipped in the OFF/Disabled position.

SW2, Upgrading Network Connections (005580, 006178, 005468, 006180, 007130, 006650, 007326)

Upgrade Selected	S1	S2	S3	S4
10 MB	ON	ON	ON	ON
100 MB*	OFF	OFF	OFF	OFF

* Requires option module

Keyboard Light Combinations for FailSafe Boot Block (T3 and T4 only)

Num Lock	Caps Lock	Scroll Lock	Meaning and Required Action
OFF	ON	OFF	System requires setup password. Enter the setup password. The light remains on until a valid password is entered.
ON	OFF	OFF	System could not boot from ROMPaq diskette because it is not present, is bad, or drive is not ready. Insert a valid ROMPaq diskette, turn power off and back on.
OFF	OFF	ON	ROM upgrade failed. Try another ROMPaq diskette. If light remains on, contact Compaq Customer Support.
ON	ON	ON	ROM upgrade successfully completed. Turn power off and back on to resume normal operation.

Deskpro 4000

CONFIGURATION CODE TABLE 1 ¹			
Configuration Code	Assembly	System Bd Spare Part	Form Factor ²
BBB1	005580-101	247382-001	DT
BBB2	005580-101	247382-001	DT
BBB3	006178-301	247383-001	DT
BBB4	006178-301	247383-001	DT
BBQ1	005580-101	247382-001	DT
BBQ2	005580-101	247382-001	DT
BBQ3	006178-301	247383-001	DT
BBQ4	006178-301	247383-001	DT
BBQ5	005580-101	247382-001	DT
BBC1	005580-101	247382-001	DT
BBC2	005580-101	247382-001	DT
BBC3	005580-101	247382-001	DT
BBC4	006178-301	247383-001	DT
BBC5	006178-301	247383-001	DT
BBC6	006178-301	247383-001	DT
BBC7	005580-101	247382-001	DT
BBD1	005580-101	247382-001	DT
BBD2	005580-101	247382-001	DT
BBD3	006178-301	247383-001	DT
BBD4	006178-301	247383-001	DT
BBD5	005580-101	247382-001	DT
BBD6	006178-301	247383-001	DT
BBD7	005580-101	247382-001	DT
BBD8	006178-301	247383-001	DT
BBD9	005580-101	247382-001	DT
BBF5	005468-101	247386-001	DT
BBF6	006180-301	247387-001	DT
BBF7	005468-101	247386-001	DT
BBF8	006180-301	247387-001	DT
BJN2 ³	005468-101	247386-001	DT
BJN2 ³	007130-101	283946-001	DT
BJN3	006180-301	247387-001	DT
BMN5	005580-101	247382-001	DT
BMN6	006178-301	247383-001	DT
BMF1	006178-301	247383-001	DT
BBK2	005580-101	247382-001	MT
BBK4	006178-301	247383-001	MT
BBL3	005580-101	247382-001	MT
BBL5	006178-301	247383-001	MT
BPQ2	006650-101	283957-001	MT
BPQ3	007326-301	283979-001	MT

¹ Applicable ONLY to products with "T1" in the "System" column. Refer to note "1" in the "System Boards" table.

² DT = Desktop MT = Minitower

³ Verify correct assy number before ordering and installing spare part.

Deskpro 4000

CONFIGURATION CODE TABLE 2 ¹			
Configuration Code	Assembly	System Bd Spare Part	Form Factor ²
BNL2	007426-101	296682-001	DT
BNL2 ³	008068-101	326969-001	DT
BNL3	008068-101	326969-001	DT
BNL5	007426-101	296682-001	DT
BNL5 ³	008068-101	326969-001	DT
BNL6	007294-101	296687-001	DT
BNL6 ³	008068-101	326968-001	DT
BNL7	007426-101	296682-001	DT
BNL7 ³	008068-101	326969-001	DT
BNL8	008068-101	326969-001	DT
BNLB	008068-101	326969-001	DT
BNLC	008068-101	326969-001	DT
BNLD	008068-101	326969-001	DT
BNLF	008068-101	326969-001	DT
BPL2	007294-101	296687-001	DT
BPL2 ³	008067-101	326968-001	DT
BPL3	007426-101	296682-001	DT
BPL3 ³	008068-101	326969-001	DT
BPL4	007426-101	296682-001	DT
BPL4 ³	008068-101	326969-001	DT
BPL5	007294-101	296687-001	DT
BPL5 ³	008067-101	326968-001	DT
BPL7	007426-101	296682-001	DT
BPL7 ³	008068-101	326969-001	DT
BPL8	008067-101	326968-001	DT
BPL8 ³	008067-101	326968-001	DT
BPLB	008068-101	326969-001	DT
BPLC	008068-101	326969-001	DT
BPLD	008068-101	326969-001	DT
BPLG	007426-101	296682-001	DT
BPLG ³	008068-101	326969-001	DT
BPLH	007426-101	296682-001	DT
BPLH ³	008068-101	326969-001	DT
BPLJ	008068-101	326969-001	DT
BPLK	008068-101	326969-001	DT
BPLL	007426-101	296682-001	DT
BPLL ³	008068-101	326969-001	DT
BPLM	007426-101	296682-001	DT
BPLN	008067-101	326968-001	DT
BPLQ	008067-101	326968-001	DT
BPLR	008068-101	326969-001	DT
BPLT	008068-101	326969-001	DT
BPLV	008067-101	326968-001	DT
BPLW	008068-101	326969-001	DT

Continued

Deskpro 4000

CONFIGURATION CODE TABLE 2 ¹			
Configuration Code	Assembly	System Bd Spare Part	Form Factor ²
BPM3	008068-101	326969-001	DT
BPM5	007294-101	296687-001	DT
BPM5 ³	008067-101	326968-001	DT
BPM6	007446-101	166578-001	DT
BPM6 ³	008069-101	326970-001	DT
BPMB	008067-101	326968-001	DT
BPMC	008067-101	326968-001	DT
BPMD	008067-101	326968-001	DT
BPMF	008067-101	326968-001	DT
BPMG	008068-101	326969-001	DT
BPMH	008067-101	326968-001	DT
BPMJ	007294-101	296687-001	DT
BPMJ ³	008067-101	326968-001	DT
BPMK	007294-101	296687-001	DT
BPMK ³	008067-101	326968-001	DT
BPML	008067-101	326968-001	DT
BPMM	008068-101	326969-001	DT
BPMQ	008067-101	326968-001	DT
BPN3	007294-101	296687-001	MT
BPN3 ³	008067-101	326968-001	MT
BPNB	008067-101	326968-001	MT
BTB9 ³	008068-101	326969-001	DT
BTB9	007426-101	296682-001	DT
BTC2	007426-101	296682-001	DT
BTC2 ³	008068-101	326969-001	DT
BXC3	008067-101	326968-001	MT
BXDZ	008067-101	326968-001	MT

¹ Applicable ONLY to products with "T2" in the "System" column.
Refer to note "1" in the "System Boards" table.

² DT = Desktop MT = Minitower

³ Shipped beginning 4Q , 1997.

Deskpro 4000

CONFIGURATION CODE TABLE 3 ¹			
Configuration Code	Assembly	System Bd Spare Part	Form Factor ²
BQ32 ³	008219-101	322742-001	DT
BQ32	007048-101	166566-001	DT
BQ33 ³	008096-101	322734-001	DT
BQ33	007047-101	296669-001	DT
BQ34 ³	008219-101	322742-001	DT
BQ34	007048-101	166566-001	DT
BQ43 ³	008096-101	322734-001	DT
BQ43	007047-101	296669-001	DT
BQ44 ³	008096-101	322734-001	DT
BQ44	007047-101	296669-001	DT
BQ3B ³	008096-101	322734-001	DT
BQ3B	007047-101	296669-001	DT
BQ3C ³	008096-101	322734-001	DT
BQ3C	007047-101	296669-001	DT
BQ3D ³	008219-101	322742-001	DT
BQ3D	007048-101	166566-001	DT
BQ3F ³	008096-101	322734-001	DT
BQ3F	007047-101	296669-001	DT
BQ3G	008096-101	322734-001	DT
BQ3H ³	008219-101	322742-001	DT
BQ3H	007048-101	166566-001	DT
BQ3J ³	008219-101	322742-001	DT
BQ3J	007048-101	166566-001	DT
BQ3K ³	008219-101	322742-001	DT
BQ3K	007048-101	166566-001	DT
BQ3L ³	008219-101	322742-001	DT
BQ3L	007048-101	166566-001	DT
BQ3M ³	008096-101	322734-001	DT
BQ3M	007047-101	296669-001	DT
BQ3N ³	008096-101	322734-001	DT
BQ3N	007047-101	296669-001	DT
BQ3Q ³	008096-101	322734-001	DT
BQ3Q	007047-101	296669-001	DT
BQ3R ³	008096-101	322734-001	DT
BQ3R	007047-101	296669-001	DT
BQ3S	008219-101	322742-001	DT
BQ4B ³	008096-101	322734-001	DT
BQ4B	007047-101	296669-001	DT
BQ4D ³	008096-101	322734-001	DT
BQ4D	007047-101	296669-001	DT
BQ4C ³	008096-101	322734-001	DT
BQ4C	007047-101	296669-001	DT

Continued

Deskpro 4000

CONFIGURATION CODE TABLE 3 ¹			
Configuration Code	Assembly	System Bd Spare Part	Form Factor ²
BQ4F ³	008096-101	322734-001	DT
BQ4F	007047-101	296669-001	DT
BQ4G ³	008096-101	322734-001	DT
BQ4G	007047-101	296669-001	DT
BQ4H ³	008096-101	322734-001	DT
BQ4H	007047-101	296669-001	DT
BQ4J ³	008219-101	322742-001	DT
BQ4J	007048-101	166566-001	DT
BQ4K ³	008219-101	322742-001	DT
BQ4K	007048-101	166566-001	DT
BQ4L ³	008219-101	322742-001	DT
BQ4L	007048-101	166566-001	DT
BQ4M ³	008096-101	322734-001	DT
BQ4M	007047-101	296669-001	DT
BQ4N ³	008096-101	322734-001	DT
BQ4N	007047-101	296669-001	DT
BQ4Q ³	008096-101	322734-001	DT
BQ4Q	007047-101	296669-001	DT
BR9B ³	008096-101	322734-001	DT
BR9B	007047-101	296669-001	DT
BR9C ³	008096-101	322734-001	DT
BR9C	007047-101	296669-001	DT
BR96 ³	008096-101	322734-001	DT
BR96	007047-101	296669-001	DT
BSBC ³	008096-101	322734-001	MT
BSBC	007047-101	296669-001	MT
BSB3 ³	008096-101	322734-001	MT
BSB3	007047-101	296669-001	MT
BSC3 ³	008096-101	322734-001	MT
BSC3	007047-101	296669-001	MT

¹ Applicable ONLY to products with "T3" in the "System" column.

Refer to note "1" in the "System Boards" table.

² DT = Desktop MT = Minitower

³ Shipped beginning 1Q, 1998.

Deskpro 4000

CONFIGURATION CODE TABLE 4 ¹			
Configuration Code	Assembly	System Bd Spare Part	Form Factor ²
BQ3G	008096-101	322734-001	DT
BQ3S	008096-101	322734-001	DT
BQ4D	008096-101	322734-001	DT
BQ4Q	008096-101	322734-001	DT
BR9D	008096-101	322734-001	DT
BR9F	008096-101	322734-001	DT
BSBB	008096-101	322734-001	MT
BSCB	008096-101	322734-001	MT
BWJ3	008096-101	322734-001	DT
BXFZ	008096-101	322734-001	DT
BXGZ	008096-101	322734-001	MT

¹ Applicable ONLY to products with "T4" in the "System" column.

Refer to note "1" in the "System Boards" table.

² DT = Desktop MT = Minitower

Microprocessors	Spare Part	System
P5/100	213113-001	T1
P5/120	213125-001	T1
P5/133	223311-001	T1
P5/166	235229-001	T1
Heat Sink, Pentium	185961-001	T1
P6/180	234536-001	T1
P6/200 ¹	210998-001	T1
Heat Sink, Pentium Pro ¹	185962-001	T1
P6/200, 3.5V ¹	283938-001	T1
Heat Sink, Pentium Pro, 3.5V ¹	295802-001	T1
Pentium-II/233, Module	283956-001	T1
P55C 166/66 (MMX)	240181-001	T1, T2
P55C 200/66 (MMX)	240181-002	T1, T2
P55C 233/66 (MMX)	286258-001	T2
Pentium II 233/66, Module	166512-001	T3
Pentium II 266/66, Module	166511-001	T3
Pentium II 300/66, Module	296672-001	T3
Pentium II 333/66, Module	322775-001	T4

¹Verify correct assembly number before ordering and installing spare part.

Memory	Assembly	Spare Part	Option	System
4 MB SIMM, EDO, 60ns	185173-002	236512-001	N/A	T1
8 MB SIMM, EDO, 60ns	185172-002	236513-001	243011-002	T1
16 MB SIMM, EDO, 60ns	185174-002	243115-001	243012-002	T1
32 MB SIMM, EDO, 60ns	185007-002	243116-001	243013-002	T1
1 MB Graphics EDO Module ¹	004824-001	213859-001	213922-001	T1
2 MB WRAM Module ²	223335-001	223339-001	223335-001	T1
6 MB WRAM Module ²	223336-001	223340-001	223336-001	T1
8 MB DIMM, 66MHz	278029-002	288438-001	242802-B21	T2, T3, T4

Continued

Deskpro 4000

Memory	Assembly	Spare Part	Option	System
16 MB DIMM, 66MHz	278030-002	278066-001	242803-B21	T2, T3, T4
32 MB DIMM, 66MHz	278031-002	278067-001	242804-B21	T2, T3, T4
64 MB DIMM, 66MHz	270859-002	278095-001	242805-B21	T2, T3, T4
128 MB DIMM, 66MHz	270858-002	278096-001	270812-B21	T2, T3, T4
16 MB DIMM, ECC, 66MHz	268307-002	278097-001	270840-B21	T2, T3, T4
32 MB DIMM, ECC, 66MHz	268308-002	288440-001	270841-B21	T2, T3, T4
64 MB DIMM, ECC, 66MHz	270857-002	278098-001	270842-B21	T2, T3, T4
128 MB DIMM, ECC, 66MHz	270856-002	278099-001	270843-B21	T2, T3, T4
SGRAM, 2 MB, for Virge/GX and Matrox MGA 1064/SG	007213-001	278094-001	270834-B21	T2, T3, T4
WRAM, 4 MB for Millennium II	270309-001	270260-001	270831-B21	T3, T4
WRAM, 12 MB for Millennium II	270310-001	270262-001	270833-B21	T3, T4

¹ Cirrus 5446 Models

² Millennium Models

Miscellaneous	Assembly	Spare Part	System
Riser Board, 2-1-2	005587-001	247390-001	T1 DT
Riser Board, 1-1-3 ¹	005930-001	247391-001	T1 DT
Riser Board, 4-0-3	005957-001	247392-001	T1 MT
Business Pro Audio	006047-001	247428-001	T1, T2
External Infrared Transceiver		185963-001	All
Enhanced EE Keyboard, U.S.		247431-101	T1
Enhanced EE Keyboard, U.S.		247432-101	T1
Scanner Keyboard, U.S.		185288-301	T1
Speaker		247508-001	T1
Mouse	141649-004	141189-401	T1
Microphone		194376-001	T1
Riser Board, 3-0-4	007430-001	270880-001	T2 MT
Riser Board, 2-1-2	007244-001	270882-001	T2 DT
Speaker, 2.5", .5W		166507-001	T2, T3
Keyboard, Spacesaver, U.S.	166516-001	166514-001	T2, T3
Riser Board, 1-1-2, AGP	007451-001	270883-001	T3, T4 DT
Riser Board, 3-0-4, AGP	007415-001	270881-001	T3, T4 MT
Fan (two pin connector)		297867-001	T3, T4
Fan (four pin connector)		322772-001	T4
Mouse		166576-001	T2, T3, T4
Microphone		278266-001	T2, T3, T4
AUI/BNC Adapter	142858-002	192768-001	T2, T3, T4
Power Switch, Momentary		166645-001	T2, T3, T4

¹ Pentium Pro models only.

Deskpro 4000

Controller Boards	Assembly	Spare Part	System
CL-GD 5446 Graphics Board, PCI	247279-001	247425-001	T1
SCSI ISA, Plug and Play (option)		133880-001	All
Millennium Graphics, PCI	006443-001	243136-001	T1
TLAN 100 TX Module (option)	005240-001	225436-001	T1
Netelligent NIC, 10/100 TX, PCI, UTP (option)	005139-001	169849-001	All
Netelligent NIC, 10 Base T, PCI, UTP (option)	006064-001	242501-001	All
IBM-Compatible Auto 16/4 TR Adapter, ISA (option)	172441-003	172194-001	All
Netelligent 16/4 TR Adapter, PCI, STP/UTP (option)	199764-001	199764-001	All
USCSI, PCI, Plug and Play	185202-001	247399-001	All
Serial/Parallel Upgrade (option)		106886-001	All
Netelligent NIC, 10 Base T, ISA, UTP (option)		265617-001	All
Netelligent NIC, 10 Base T2, ISA, UTP/Coax (option)		265618-001	All
PCI NIC, Token Ring (option)		268010-001	All
ISA NIC, Token Ring (option)		265436-001	All
Graphics, S3 Virge-GX		296684-001	All
Matrox MGA 1064/SG	007412-001	296677-001	All
Matrox MGA 220	328694-001	296677-001	T3, T4
Matrox Millenium II, 2D, PCI	270243-001	270242-001	All

CD-ROM Drive	Spare Part	System
CD-ROM, Internal, 8X, IDE	185916-201	All
PD/CD-ROM, SCSI	184691-201	T1
PD/CD-ROM, 6X, IDE	238439-201	All
PD 650 MB Cartridge	186075-001	All
CD-ROM, Internal, 4X, SCSI (option)	184783-001	T1
CD-ROM, Internal, 4X, IDE (option)	172717-001	All
CD-ROM, 16X, IDE, Slot Load	278791-001	T2
PD-CD, 8X, IDE (option)	185951-001	T2, T3, T4
CD-ROM, 24X, IDE, Slot Load	278026-001	T3 T4

Hard Drives	Spare Part	System
1.08 GB, EIDE, SMART T1*	185959-001	T1
1.62 GB, EIDE, SMART T1*	247411-001	T1
2.5 GB, EIDE, SMART T1*	247412-001	T1
2.4 GB, IDE, Ultra ATA	296679-001	T2, T3
3.2 GB, IDE, Ultra ATA	296681-001	T2, T3, T4
4.3 GB, Ultra ATA (option)	294191-001	All
4.3 GB, USCSI (option)	247408-001	All
2.1 GB, USCSI (option)	247409-001	All

* T1 SMART = Self-Monitoring Analysis and Reporting Technology.

Tape Drives	Spare Part	System	Tape Cart	Spare Part
340/680 MB	187658-001	All	340 MB	184299-001
with Compression			680 MB	184300-001
1.2 GB ACA	199615-001	All	1.3 GB DAT	131167-001
4 GB TR4, IDE	294126-001	All	4 GB TR4	294140-001
5.0 GB DAT	142074-201	All	2.0 GB DAT	131148-001
			5.0 GB DDS2	199496-001
2/8 GB DAT	142074-001	All	2.0 GB DAT	131148-001
			4.0 GB DDS2	199496-001

Deskpro 4000

Diskette Drives	Spare Part	System
1.44 MB, 3-Mode	160788-201	All
LS-120, 3-Mode, IDE	263709-001	All
1.2 MB, 5.25," ½ Height	Discontinued	All
LS-120 Diskette	186076-001	All

28.8k-bps Modem (All systems)

Country	Assembly	Spare Part	RJ-11 Phone Cable	Option
U.S.	223610-002	259214-002	127949-001	259213-001

33.6k-bps Data/FAX Modem (All systems)

Country	Assembly	Spare Part	RJ-11 Phone Cable	Option
U.S.	295106-001	259214-002	127949-001	259213-002

Cables	Spare Part	System
Diskette Drive, 1.44 MB	247483-001	T1, T2, T3
Diskette Drive, 1.44 MB, 3 Mode	298848-001	T4
Hard Drive or Diskette Drive (120 MB), IDE	247484-001	All DT
LED, SCSI	247485-001	T1
CD-ROM, IDE	214356-001	All
Business Pro Audio	171109-001	All
PD-CD and Hard Drive, SCSI, 3-pos, Term	247486-001	All
Diskette Drive (1.44 MB)	247487-001	All MT
Hard Drive or Diskette Drive (120 MB), IDE	243085-001	All MT
CD/LS-120 Diskette/Tape Drive, IDE, 3-pos	247568-001	All DT
CD/LS-120 Diskette/Tape Drive, IDE, 3-pos	200860-001	All MT
BNC "T" Adapter	186522-001	All
Power Adapter, LS-120	186423-001	All
Diskette Drive, 1.44 MB	166506-001	All MT
Hard Drive, Ultra ATA, 80-Pin (Option)	166573-001	T2, T3
Token Ring Cable Assembly	172844-001	T2
Thermistor Cable	283986-001	T1
Hood Lock/Power Switch Assembly	166565-001	T2, T3



ROM Information (All systems)

ROM Information (All systems)	Spare Part
System ROMPaq	183991-001

Power Supply/Battery	Spare Part	System
Power Supply, 160 W	247132-001	T1 DT
Power Supply, 200 W	247134-001	T1 MT
Real-Time Clock Battery (4.5 V Alkaline)	160274-001	All
Power Supply, 200 W, 5V, Aux	270656-001	T2
Power Supply, 200 W, Pentium II	166572-001	T3 DT, T4
Power Supply, 280 W, Pentium II	270657-001	T3 MT

Deskpro 4000

Memory Upgrade Chart

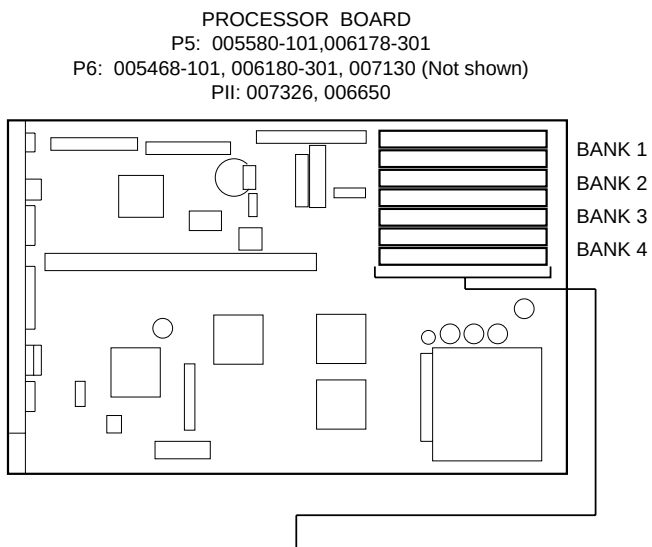

4-MB 60ns, EDO - OPTION PN 243011-002

8-MB 60ns, EDO - OPTION PN 243012-002

16-MB 60ns, EDO - OPTION PN 243013-002


32-MB 60ns, EDO - OPTION PN 243014-002

CAUTION: Your SIMM sockets have tin-lead metal contacts that are silver in appearance. When upgrading your memory, it is important to use SIMMs with tin-lead metal (not gold) to prevent corrosion and/or oxidation resulting from having incompatible metals in contact with each other.


Deskpro 4000

Memory Upgrade Chart

SYSTEM BOARD 32-MB
P55C: (007294, 007426, 007446)
Pentium II: (007047, 006627, 007048 008067,
008068, 008069, 008096, 008219)

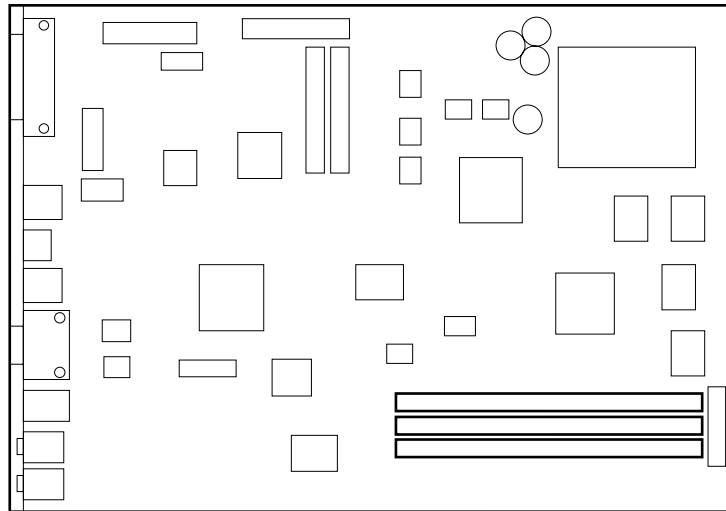

A MAXIMUM OF 256 MB TOTAL MEMORY



8-MB 66ns DIMMS, EDO - OPTION PN 242802-B21

16-MB 66ns DIMMS, EDO - OPTION PN 242803-B21

32-MB 66ns DIMMS, EDO - OPTION PN 242804-B21

64-MB 66ns DIMMS, EDO - OPTION PN 242805-B21

128-MB 66ns DIMMS, EDO - OPTION PN 270812-B21