

Presario 4800

System Boards (w/o Proc)	Assembly	Spare Part	System
Sys Board, 586, KV3, GX	006951-101	286165-001	4808, 10, 14, 16
Sys Board, P6, Virge	286019-101	286166-001	4824, 30, 34
Sys Board, P6, CPQ	007427-101	286411-001	4830, 24, 34, 40, 50
Riser Card	007261-001	286535-001	All

Configuration Jumper Settings (006951)

Jumper	Pins	Function
P2		Replacement battery connector
P9 Bus Speed Select	1 – 2	60 MHz CPU External Bus Frequency
	2 – 3	66 MHz CPU External Bus Frequency
P11 CPU Clock Multiplier	A1 – A2	X 3.5 (233 MHz only)
	B1 – B2	
	A2 – A3	X 2.0
	B1 – B2	
	A2 – A3	X 2.5
	B2 – B3	
	A1 – A2	X 3.0
	B2 – B3	
P12 CMOS Clear	1 – 2*	Secure CMOS Power
	Open	To clear CMOS, remove jumper for 10 seconds the reinstall

* Default

Pentium II Speed Configuration Jumpers (286019-101)

Speed (MHz)	J1J1 B	J1J1B	J1J1 C
200	2 – 3	4 – 5	1 – 2
233	1 – 2	4 – 5	1 – 2
266	2 – 3	5 – 6	2 – 3

Jumper Switch Settings (286019-101)

Function	Jumper	Positions	Settings
Boot	J8K1	Normal	2 – 3*
		Recovery	1 – 2
Setup	J1J1 D	Enable	5 – 6*
		Disable	4 – 5
Power Down	J1J1 D	Allowed	2 – 3*
Disable		Disable	1 – 2
CMOS	J1J1 C	Normal	5 – 6*
		Clear CMOS	4 – 5

* Default

Configuration Code	System Board Spare Part	Model
BN32	286166-001	4824
BNG2	286165-001	4816
BNG3	286165-001	4810
BNG6	286165-001	4814
BNG7	286165-001	4814
BNX2	286166-001	4824
BNZ6	286165-001	4808

Presario 4800

Microprocessors	Spare Part	System
P55C200/66 MMX	240181-002	4808
P55C233/66 MMX	286258-001	4810, 14, 16
Klamath, 266	286275-001	4830, 32, 34
Klamath, 233	279868-001	4824
Klamath, 300	297327-001	4850
Heat Sink/ Clip Kit, P55C Processor	238247-001	4810, 10, 14, 16
Fan, Processor	286262-001	4824, 30, 32, 34, 40, 50

Memory	Assembly	Spare Part	System
16 MB Synch DRAM, DIMM, 60ns	278030-002	278066-001	All
16 MB SIMM, 60ns,	185174-002	243115-001	4830, 32, 34
2 MB Video Memory	006419-001	271174-001	4824, 34, 30, 32
Cache 512K	237716-002	243117-002	
Cache 256K	237716-001	243117-001	4810, 14, 16

Miscellaneous	Assembly	Spare Part	System
Keybd, U.S./Can. Eng, Ivory	286220-003	304286-033	4808, 14, 16, 24, 34
Keybd, U.S./Can. Eng, Sunset	286220-005	286241-005	4840, 50
Mouse, Ivory	149998-006	286231-001	All except 4840, 50
Mouse, Sunset	149998-005	286232-001	4840, 50
Speaker, Iguana	239508-001	238207-001	All except 4834
Speaker, GW	239508-001	238206-001	4816, 34
Game Port Assy	293231-001	286259-001	All
Audio Visual Board	007279-001	286170-001	All
AC Adapter	240119-001	240164-001	4816, 34

Hard Drives	Assembly	Spare Part	System
4.3 GB, IDE, 5.25"	241138-001	271119-001	4808
4.0 GB, IDE		286248-001	4810, 14
6.5 GB, IDE, 5.25"	241139-001	271127-001	All exc 4808, 10, 14

CD-ROM Drive	Assembly	Spare Part	System
CD-ROM, IDE, 24-spd, Slot	282961-401	282965-001	All
DVD Drive	270820-608	286410-001	4848, 50
CD-ROM, IDE, 24-spd, Slot	282961-401	282965-001	All except 4840, 50
ZIP Drive 100 MB		270946-001	4814

Diskette Drives	Spare Part	System
1.44 MB, Ivory	239612-401	All except 4840, 50
1.44 MB, Sunset	286247-001	4840, 50

Miscellaneous	Assembly	Spare Part	System
Game Port Assy	293231-001	286259-001	All

Presario 4800

33.6k-bps Modem

Country	Assembly	Spare Part	Cable Spare Part
APD	007201-001	298927-371	137256-001
Australia	007201-001	298927-011	165224-012
Belgium	007201-001	298927-181	165224-182
Denmark	007201-001	298927-081	165224-081
Finland	007201-001	298927-351	165224-352
France	007201-001	298927-051	165224-051
Germany	007201-001	298927-041	165224-041
Korea	007201-001	298927-AD1	165224-AD1
Netherlands	007201-001	298927-331	165224-331
New Zealand	007201-001	298927-011	165224-033
Norway	007201-001	298927-091	165224-091
Sweden	007201-001	298927-101	165224-101
Switzerland	007201-001	298927-111	165224-111
U Kingdom	007201-001	298927-031	165224-033

56k-bps Modem

Country	Assembly	Spare Part	Cable Spare Part	System
Japan	292256-001	292269-001	165224-001	4814
Latin America	292256-001	292269-001	165224-001	4814
Taiwan	292256-001	292269-AB1		
U.S.	292256-001	292269-001	165224-001	4808, 14, 16, 24, 34, 40, 50

Cables	Spare Part	System
Cable Kit: CD-ROM, Diskette, HD, Audio	286276-001	All
Audio Visual	286261-001	All
Audio	171109-001	All
Button	286260-001	All
CD-ROM Drive	286276-001	All
ZIP Drive	271207-001	4814
Diskette Drive (assy 238078-001)	286276-001	All
Hard Drive (assy 238079-001)	286276-001	All

ROM Information	Spare Part	System
System ROMPaq	148218-001	All


Power Supply/Battery	Spare Part	System
Power Supply	286009-001	All
Battery, 3v		4824, 30, 32, 34
Battery, RTC, External	160274-001	All

Presario 4800


MEMORY UPGRADE CHART

I/O BOARD

286165-001

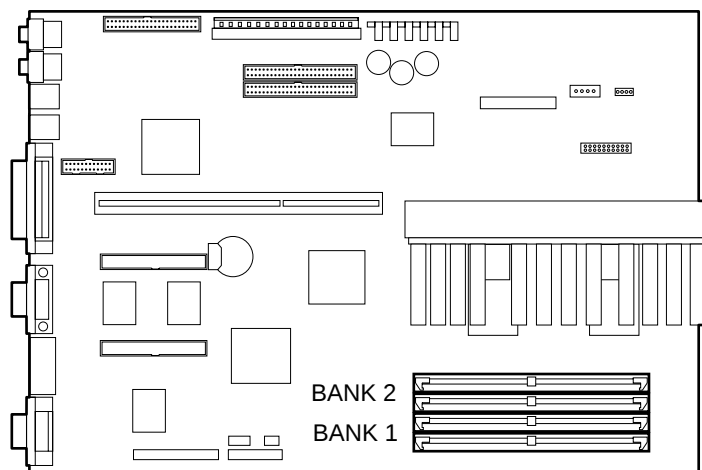

A MAXIMUM OF 256 MB TOTAL MEMORY




16-MB SDRAM DIMM 60ns - OPTION PN 293820-001


No 4, 8, or 32MB options

Presario 4800

MEMORY UPGRADE CHART I/O BOARD 286411-001

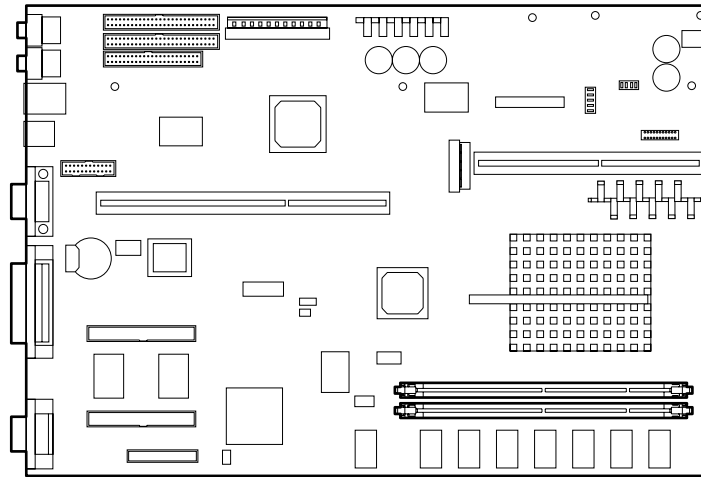

A MAXIMUM OF 256 MB TOTAL MEMORY



16-MB SDRAM DIMMS 60 ns - OPTION PN 271433-001

32-MB SDRAM DIMMS 60 ns - OPTION PN 271434-001