

Deskpro EN

Large Form Factor

Processor Boards	Assembly	Spare Part	Config Code Table
Processor Board w/ Tray (Intel 440 BX)	008123-101 ²	178919-001	T1
Processor Board w/ Tray (Intel 440 BX)	008123-102 ²	178919-001	T1
Processor Board w/ Tray (Intel 440 BX)	007998-102 ¹	178919-001	T1
Processor Board w/ Tray (Intel 440 BX)	007998-101	178919-001	T1
Processor Board w/ Tray (Intel 440 BX)	008123-103 ³	400805-001	T1
Processor Board (Intel 440 BX)	010561-101	162857-001	T2
Processor Board w/ Tray (Intel 810)	010127-101 ⁴	117740-001	T2
Processor Board w/ Tray (Intel 820)	010693-101 ⁵	158750-001	T3
System Board	010630-101	187498-001	T3
System Board w/ 256K Cache		164002-001	T1

Note: To avoid injury from electric shock and/or hot surfaces and to prevent damage to the system board and/or interface boards (such as NICs, video controllers, and memory), unplug the AC power cord from the wall outlet and allow the internal components of the PC to cool before servicing the unit.

¹ Shipped beginning 2Q, 1998.

⁴ Shipped beginning 3Q, 1999.

² Shipped beginning 3Q, 1998.

⁵ Shipped beginning December, 1999.

³ Shipped beginning 1Q, 1999.

Configuration (007998)

Jumper	Function	Setting	Description
E50 (440 BX) Jumper	Clear CMOS	1-2 2-3	To clear CMOS, move jumper from pins "1-2" to pins "2-3" for 60 seconds. Then, return jumper to original location.
E50 (810) Button	Clear CMOS	NONE	To clear CMOS, locate CMOS button and press down for 5 seconds.

SW1, Speed Settings* (007998)

66 MHz bus	100 MHz bus	S2	S3	S4	S5
	350	OFF	OFF	ON	ON
266	400	ON	ON	OFF	ON
300	450	ON	OFF	OFF	ON
333	500	OFF	ON	OFF	ON
366	550	OFF	OFF	OFF	ON
400	600	ON	ON	ON	OFF

*As of January 1, 1999, all 400 MHz and faster Intel Celeron and Pentium processors are shipped with the processor speed preset. The preset speed will override any switch settings set on the system board for processor speed. After July 1, 1999, system boards will no longer have speed setting SW1 switches.

SW1, Password and Power Settings (007998)

S1 Password Control	S6 Power Switch
Disable Password = ON	ON: When connected to power, computer waits for user to press ON/OFF button before booting. Default.
Enable Password = OFF	OFF: When connected to power, computer will boot.

Deskpro EN

Large Form Factor

Keyboard Light Combinations for FailSafe Boot Block

Num Lock	Caps Lock	Scroll Lock	Meaning and Required Action
OFF	ON	OFF	System requires setup password. Enter the setup password. The light remains on until a valid password is entered.
ON	OFF	OFF	System could not boot from ROMPaq diskette because it is not present, is bad, or drive is not ready. Insert a valid ROMPaq diskette, turn power off and back on.
OFF	OFF	ON	ROM upgrade failed. Try another ROMPaq diskette. If light remains on, contact Compaq Customer Support.
ON	ON	ON	ROM upgrade successfully completed. Turn power off and back on to resume normal operation.

Diagnostic LEDs – Keyboard

Key	Beeps	Meaning and Required Action
Num Lock – Flashing	1 Short, 2 Long	System memory is absent. Ensure that compatible DIMMs are installed in the unit. If so, reseal the modules.
Caps Lock – Flashing	1 Long, 2 Short	Video graphics board is not installed or incorrectly initialized. Clear CMOS, and if the video board is present, remove and reseal.
Scroll Lock – Flashing	2 Long, 1 Short	System initialization failed and the unit cannot boot. The system configuration may be invalid. Clear CMOS and see the configuration label for jumper location and instructions.

Diagnostic LEDs (440 BX Unit)

Power LED	Color	Meaning
Flashing	Green	The unit is on and power supply is providing power to the system.
Slow-Blinking	Green	The unit is in a low-power state.
Fast-Blinking	Green	Processor-initiated thermal shutdown has occurred.

Diagnostic LEDs (810 Unit and Keyboard)

LED	Color	LED Activity	State/Message
Power	Green	On	Computer on
Power	Green	1 blink per second	Normal suspend mode
Power	Red	4 blinks per second	CPU thermal shutdown
Power	Red	On	CPU not installed or working
Power	Red	1 blink per second	ROM error
Power	Red	1 blink per two or more seconds	Power supply crow bar
Power and Hard Drive	Red	On	Riser board not seated
Caps Lock	Green	Flashing	No video
Scroll Lock	Green	Flashing	System board failure, prior to video

Deskpro EN

Large Form Factor

Configuration Code Table One (T1)			
Configuration Code*	Assembly	System Board Spare Part	Form Factor
BWZ2 – BWZ6	See Note 1	178919-001	DT
BW22 – BW44	See Note 1	178919-001	DT
BW2F – BW2Y	See Note 1	178919-001	DT
BW3B – BW3Y	See Note 1	178919-001	DT
BW3B – BW3Y	008123-103 ²	400805-001	DT
BW32 – BW42	See Note 1	178919-001	DT
BW32 – BW46	008123-103 ²	400805-001	DT
BW4B – BW4S	See Note 1	178919-001	DT
BW4B – BW4S	008123-103 ²	400805-001	DT
BW53	See Note 1	178919-001	DT
BW53	008123-103 ²	400805-001	DT
BW5B – BW5C	See Note 1	178919-001	DT
BW5B – BW5C	008123-103 ²	400805-001	DT
BW82 – BW85	See Note 1	178919-001	MT
BW82 – BW85	008123-103 ²	400805-001	MT
BW8D – BW8Y	See Note 1	178919-001	MT
BW8D – BW8Y	008123-103 ²	400805-001	MT
BWZB – BWZY	See Note 1	178919-001	DT
BWZ4	See Note 1	178919-001	DT
BXHB – BXHY	See Note 1	178919-001	DT
BXH2 – BXH8	See Note 1	178919-001	DT
BZK2	See Note 1	178919-001	MT
BZKG – BZKT	See Note 1	178919-001	MT
BZL2	See Note 1	178919-001	MT
BZL2	008123-103 ²	400805-001	MT
BZMB	See Note 1	178919-001	MT
BZMB	008123-103 ²	400805-001	MT
BZMC	See Note 1	178919-001	MT
BZMC	008123-103 ²	400805-001	MT
BZM2	See Note 1	178919-001	MT
BZM2	008123-103 ²	400805-001	MT
CDDZ	See Note 1	178919-001	DT
CDDZ	008123-103 ²	400805-001	DT
CDFZ	See Note 1	178919-001	MT
CDFZ	008123-103 ²	400805-001	MT

*Refer to Desktop and Minitower Off-Menu Configurations appendix for CTO configuration information.

Note 1: Units may contain 007998-101, 007998-102, 008123-103 or 008123-102. Need assembly number and configuration code when ordering spare.

²Shipped beginning 1Q, 1999.

Continued

Deskpro EN

Large Form Factor

Configuration Code Table One (T1)			
Configuration Code*	Assembly	System Board Spare Part	Form Factor
CDXP	See Note 1	178919-001	MT
CDXP	008123-103 ²	400805-001	MT
CDYP	See Note 1	178919-001	MT
CDYP	008123-103 ²	400805-001	MT
CDN2 – CDN3	See Note 1	178919-001	DT
CDN2 – CDN3	008123-103 ²	400805-001	DT
CDN3	See Note 1	178919-001	DT
CDN3	008123-103	400805-001	DT
CDZ2 – CDZ7	See Note 1	178919-001	DT
CDZ2 – CDZ7	008123-103 ²	400805-001	DT
CDZB	See Note 1	178919-001	DT
CDZC	See Note 1	178919-001	DT
CD4B	See Note 1	178919-001	DT
CD4B	008123-103 ²	400805-001	DT
CD6B – CD6R	See Note 1	178919-001	MT
CD6B – CD6R	008123-103 ²	400805-001	MT
CD7P	See Note 1	178919-001	DT
CD7P	008123-103 ²	400805-001	DT
CD8P	See Note 1	178919-001	DT
CD8P	008123-103 ²	400805-001	DT
CD23	See Note 1	178919-001	DT
CD23	008123-103 ²	400805-001	DT
CD35	See Note 1	178919-001	DT
CD35	008123-103 ²	400805-001	DT
CD47 – CD49	008123-103 ²	400805-001	DT
CD48 – CD49	See Note 1	178919-001	DT
CD53 – CD54	See Note 1	178919-001	MT
CD53 – CD54	008123-103 ²	400805-001	MT
CD63 – CD65	See Note 1	178919-001	MT
CD63 – CD65	008123-103 ²	400805-001	MT
CF83	See Note 1	178919-001	MT
CF83	008123-103 ²	400805-001	MT
CGMD – CGQM	See Note 1	178919-001	DT
CGQ2 – CGQ4	See Note 1	178919-001	
CGQ2 – CGQ4	008123-103 ²	DT	

*Refer to Desktop and Minitower Off-Menu Configurations appendix for CTO configuration information.

Note 1: Units may contain 007998-101, 007998-102, 008123-103 or 008123-102. Need assembly number and configuration code when ordering spare.

²Shipped beginning 1Q, 1999.

Continued

Deskpro EN

Large Form Factor

Configuration Code Table One (T1)			
Configuration Code*	Assembly	System Board Spare Part	Form Factor
CGR2 – CGR4	See Note 1	DT	MT
CGR2 – CGR4	008123-103 ²	400805-001	MT
CGS2 – CGS4	See Note 1	178919-001	MT
CGS2 – CGS4	008123-103 ²	400805-001	MT
CGTP	See Note 1	178919-001	DT
CGTP	008123-103 ²	400805-001	DT
CJGC – CJGD	See Note 1	178919-001	DT
CJGC – CJGD	008123-103 ²	400805-001	DT
CJHG – CJHJ	See Note 1	178919-001	MT
CJHG – CJHJ	008123-103 ²	400805-001	MT
CK7B – CK7C	See Note 1	178919-001	DT
CK7B – CK7C	008123-103 ²	400805-001	DT
CK8P	See Note 1	178919-001	MT
CK8P	008123-103 ²	400805-001	MT
CK9P	See Note 1	178919-001	MT
CK9P	008123-103 ²	400805-001	MT
CKBB	See Note 1	178919-001	DT
CKBB	008123-103 ²	400805-001	DT
CKL2 – CKL4	008123-103 ²	400805-001	DT
CKM2 – CKM6	008123-103 ²	400805-001	DT
CKN2 – CKN9	008123-103 ²	400805-001	DT
CKP2 – CKP9	008123-103 ²	400805-001	DT
CKQ2 – CKQ3	008123-103 ²	400805-001	MT
CKR2 – CKR3	008123-103 ²	400805-001	MT
CKS2 – CKS4	008123-103 ²	400805-001	MT
CKT2 – CKT4	008123-103 ²	400805-001	MT
CKVB	008123-103	400805-001	DT
CKWP	008123-103 ²	400805-001	DT
CKXP	008123-103 ²	400805-001	DT
CKYP	008123-103 ²	400805-001	DT
CLBP	See Note 1	178919-001	MT
CLBP	008123-103 ²	400805-001	MT
CMYP	008123-103 ²	400805-001	MT
CMZP	008123-103 ²	400805-001	MT
CN42	008123-103 ²	400805-001	DT
CN52	008123-103 ²	400805-001	DT

*Refer to Desktop and Minitower Off-Menu Configurations appendix for CTO configuration information.

Note 1: Units may contain 007998-101, 007998-102, 008123-103 or 008123-102. Need assembly number and configuration code when ordering spare.

²Shipped beginning 1Q, 1999.

Continued

Deskpro EN

Large Form Factor

Configuration Code Table One (T1)			
Configuration Code*	Assembly	System Board Spare Part	Form Factor
CR22 – CR24	008123-103 ²	400805-001 164002-001	MT
CR22 – CR29	008123-103 ²	400805-001 164002-001	DT
CWMP	008123-103 ²	400805-001	DT
CWNP	008123-103 ²	400805-001	DT
CWPP	008123-103 ²	400805-001	DT
CWQP	008123-103 ²	400805-001	MT
CWRP	008123-103 ²	400805-001	MT
CWSP	008123-103 ²	400805-001	MT
DKZ2	010561-101	162857-001	DT
DKY2-DKY3	010561-101	162857-001	DT
DKY5	010561-101	162857-001	DT
DM82	010561-101	162857-001	DT
DM92	010561-101	162857-001	DT

*Refer to Desktop and Minitower Off-Menu Configurations appendix for CTO configuration information.

Note 1: Units may contain 007998-101, 007998-102, 008123-103 or 008123-102. Need assembly number and configuration code when ordering spare.

²Shipped beginning 1Q, 1999.

Configuration Code Table Two (T2)			
Configuration Code*	Assembly	System Board Spare Part	Form Factor
CV92 – CV99	010127-101	117740-001	DT
CV9P	010127-101	117740-001	DT
CWPZ	010127-101	117740-001	DT
DBP2 – DBP3	010127-101	117740-001	DT
DBW2 – DBW9	010127-101	117740-001	DT
DBWP	010127-101	117740-001	DT
DDZ2, DDZ3	010127-101	117740-001	DT

*Refer to Desktop and Minitower Off-Menu Configurations appendix for CTO configuration information.

Configuration Code Table Two (T3)			
Configuration Code*	Assembly	System Board Spare Part	Form Factor
DCD2, DCD3	010693-XXX	158750-001	MT
DH92 – DH94	010693-XXX	158750-001	DT
DH95		158750-001 164002-001	DT
DJB2, DJB3	010693-XXX	158750-001	DT

*Refer to Desktop and Minitower Off-Menu Configurations appendix for CTO configuration information.

Continued

Deskpro EN

Large Form Factor

Configuration Code Table Two (T3)			
Configuration Code*	Assembly	System Board Spare Part	Form Factor
DJF3	010693-XXX	158750-001	DT
DJF5, DJF6	010693-XXX	158750-001	DT
DJF8	010693-XXX	158750-001	DT
DNS2, DNS3	010693-XXX	158750-001	DT
DNT2	010693-XXX	158750-001	DT
DYSZ	010630-101	187498-001	DT

*Refer to Desktop and Minitower Off-Menu Configurations appendix for CTO configuration information.

Microprocessors	Spare Part
266/66 PII w/ Heat Sink	179183-001
300/66 PII w/ Heat Sink & Baffle	179174-001
300/66 Celeron w/ Heat Sink & Cover , No Cache	358230-001
300/66 Celeron w/ Heat Sink & Cover , 128K	330399-001
333/66 Celeron w/ Heat Sink & Cover , 128K	330400-001
333/66 PII w/ Heat Sink	179184-001
350/100 PII w/ Heat Sink	179172-001
366/66 Celeron w/ Heat Sink & Cover, 128K	400806-001
400/66 Celeron w/ Heat Sink & Cover, 128K	100704-001
400/100 PII w/ Heat Sink	179326-001
433/66 Celeron w/ Heat Sink & Cover, 128K	120685-001
450/100 PIII 512K w/ Heat Sink	102429-001
450/100 PII w/ Heat Sink	179173-001
466/66 Celeron w/ Heat Sink & Cover, 128K	103747-001
500/100 PIII 512K w/ Heat Sink	102430-001
500/66 Celeron w/ Heat Sink, 128K	155379-001
550/100 PIII 512K Cache w/ Heat Sink	135363-001
550/100 PIII w/ 256K Cache	175938-001
600/66	192011-001
600/100 PIII w/ 256K Cache	175939-001
600/100 PIII Cache w/ Heat Sink	157809-001
600/133 PIII w/ Heat Sink	158783-001
650/100 PIII w/ Heat Sink	162858-001
667/133 PIII w/ Heat Sink	158784-001
667/133 PIII w/ Heat Sink	192007-001
700/100 PIII w/ Heat Sink	165055-001
733/133 PIII w/ Heat Sink	164796-001
733/133	192008-001
750/100 – CTO only	177459-001
800/133	192009-001
866/133	192006-001
933/133	192010-001

Deskpro EN

Large Form Factor

Miscellaneous	Assembly	Spare Part	System
Audio Sound Blaster PCI 128V		113897-001	All
Backplane Board, 0-2-2	009663-001 ¹	178936-001	DT (T1)
Backplane Board, 0-2-2	001436-001	123717-001	DT (T2)
Backplane Board, 2-0-5	008058-001	179175-001	MT
Backplane Board/II, 2-0-5	010439-001	123718-001	MT
Fan	180708-001	203618-001	DT
Fan Assy, w/ Enclosure, 80mm		179289-001	DT
Fan Assy, w/ Enclosure, 92mm		179368-001	MT
Fan Guard	103263-003	207609-001	MT
Floppy Eject Button		103997-001	DT
Hood Assembly w/ Bezel		179179-001	DT
Hood Assembly w/ Bezel		126008-001	DT
Keyboard, US, Basic, Smart Card	115505-XX6	125790-XX1	DT
Keyboard, US, Easy Access	122659-XX6	123130-XX1	DT
Keyboard, US, Easy Access, USB	170258-XX6	173304-XX1	DT
Keyboard, US, Enhanced	112259-006	269513-001	All (T2)
Keyboard, US, Enhanced Smart Card	115239-XX6	125761-XX1	DT
Keyboard, US, Spacesaver, Opal	166516-006	269513-001	All
Misc. Hardware		147909-001	DT (T2)
Misc. Plastics		179371-001	MT
Misc. Plastics		179181-001	DT
Misc. Plastic Kit		201271-001	DT
Misc. Plastic Kit		166878-001	MT
Misc. Plastics, Opal		147910-001	DT (T2)
Mouse, MS Intellimouse		317863-001	All
Mouse, Opal	141649-006	166861-001	All
Mouse Scroll, Opal	334684-006	334689-002	DT
Power Switch w/ LED and Bracket		179383-001	MT (T1)
Power Switch w/ LED and Bracket	179138-001	179293-001	DT (T1& 2)
Riser Board/II, 0-2-2	010436-002	123717-001	DT
Slot Cover		141081-001	All
Solenoid Kit	270718-002	179189-001	All
Speaker, 40x70 12"	174921-002	192518-001	DT
Speakers, Ext, Premier Sound	133566-001	294408-001	MT
Speaker w/ Enclosure	179078-001	179188-001	All

¹Units may have shipped with Backplane Board #008001-001 or 009663-002.

Removable Storage	Assembly	Spare Part	System
CD-ROM, 24X, Tray, Opal		166869-001	All
CD-ROM, 32X, Tray, Opal		327659-001	All
CD-ROM, 40X	388036-001	400807-001	All
CD-ROM, TrueX 52X	108933-001	120696-001	All
DVD, GEN3, Opal, 5X	356146-701	386128-001	All
DVD, 10X/40X		161430-001	All
LS120, 1X		358232-001	All
Tape Drive, Backup, TR5 10/20 GB	388737-001	480081-001	All
Zip 100 Drive, Iomega	270928-703	386561-001	All

Deskpro EN

Large Form Factor

Controller Boards	Assembly	Spare Part	System
Audio, SoundBlaster, Ensonig 1373, 128V	102392-001	113897-001	All
Graphics, Matrox G200 SG	358231-001	294409-001	All
Graphics, Matrox Millennium G400, NLX	400273-001	400438-001	T3
Graphics, Matrox Millennium II	007448-001	296676-001	All
Graphics, NVIDIA NV3, AGP Card	322727-001	322747-001	All
Graphics, NVIDIA NV4	330751-001	386875-001	All
Graphics, Rage Pro, NLX, 2X	334134-001	334170-001	All
Graphics, Rage Pro, NLX, 2X w/ 8 mg	401271-001	113874-001	All ¹
Graphics, RagePro NLX, 1X		166871-001	All
Graphics, TNT2, 16M SDRAM	175779-001	179997-001	DT/MT
NIC, PCI, 10/100	108897-001	116188-001	All
NIC, PCI, 10/100, AOL, 3-Com	402355-001	118042-001	All
NIC Netelligent, 10/100, TX, TLAN	005139-001	169849-001	All
NIC, Madge 51-04, 4/16 PCI, WOL	150257-001	153106-001	All
NIC, PCI, 10/100, WOL, 3-Com	179338-001	179167-001	All
NIC, PCI, Fast Ethernet 10/100 WOL, Intel	323550-001	323553-001	All
NIC, PCI, Fast Ethernet 10/100 WOL, NC3121Intel	323557-001	323556-001	All
NIC, PCI, PRO/100+, WOL/AOL, Intel	108897-001	116188-001	All ¹
PCI, SCSI, 2940UW	334136-001	179261-001	All
PCI, SCSI, U2	225537-001	247485-001	All
PCI, SCSI2, Wide-Ultra2, 10K	358227-001	330522-001	All
Power Switch	180706-001	192013-001	DT
Token Ring, 4/16 WOL, IBM	179264-001	179294-001	All

¹As of May 15, 1999, all Deskpro EN Intel Pentium units with processor speeds greater than 350 MHz and Serial Number x921xxxxxxx should ship with the new Intel PRO/100+ Management Adapter with SMBus NIC (spare number 116188-001) and the ATI Rage Pro Turbo Graphics Controller with 8 MB of memory (non-upgradable) (spare number 113874-001). The 116188-001 NIC is not backward compatible on units with lower serial numbers unless the unit is upgraded with the new NIC driver available from compaq.com. The new driver is backward compatible.

Note: To avoid injury from electric shock and/or hot surfaces and to prevent damage to the system board and/or interface boards (such as NICs, video controllers, and memory), unplug the AC power cord from the wall outlet and allow the internal components of the PC to cool before servicing the unit.

Deskpro EN

Large Form Factor

Memory*	Assembly	Spare Part	Option Part	System
2 MB SODIMM, SGRAM, ATI	314024-002	166971-001	294266-B21	All ** ¹
4 MB SODIMM, SGRAM, ATI	314025-002	166972-001	294227-B21	All ** ²
4 MB WRAM, Millennium II	270309-001	270260-001	270831-001	All **
8 MB SGRAM, G200	356125-002	386047-001	294417-B21	All **
12 MB WRAM, Millennium II	270310-001	270262-001	270833-B21	All **
16 MB DIMM, 100 MHz, SDRAM	323010-001	166969-001	166611-B21	All **
16 MB DIMM, 66 MHz	278030-002	278066-001	242803-B21	All **
32 MB DIMM, 100 MHz	323011-001	166890-001	166612-B21	All **
32 MB DIMM, 100 MHz, SDRAM	323029-001	166890-001	166612-B21	All **
32 MB DIMM, 100 MHz, SDRAM, ECC	178924-001			
32 MB DIMM, 100 MHz, SDRAM, ECC	323015-001	166968-001	166616-B21	All **
32 MB DIMM, 66 MHz	278031-002	278067-001	242804-B21	All **
32 MB DIMM, 66 MHz, ECC	268308-002	288440-001	270841-B21	All **
64 MB DIMM, 100 MHz	323012-001	179190-001	166613-B21	All **
64 MB DIMM, 100 MHz, ECC	323016-001	166967-001	166617-B21	All **
64 MB DIMM, 66 MHz, SDRAM	270859-002	278095-001	242805-B21	All **
64 MB DIMM, 66 MHz, SDRAM, ECC	270857-002	278098-001	270842-B21	All **
64MB SDIMM, PC133	140132-001	170080-001		All
128 MB DIMM, 100 MHz, SDRAM	323013-001	166966-001	166614-B21	All **
128 MB DIMM, 100 MHz, SDRAM, ECC	323017-001	166965-001	166618-B21	All **
128 MB DIMM, 66 MHz, SDRAM	270858-002	278096-001	270812-B21	All **

*100 MHz memory only on 810 Intel boards.

**66 MHz memory will not work with a 100 MHz processor.

Note: To avoid injury from electric shock and/or hot surfaces and to prevent damage to the system board and/or interface boards (such as NICs, video controllers, and memory), unplug the AC power cord from the wall outlet and allow the internal components of the PC to cool before servicing the unit.

¹Use with 166871-001 graphics card only.

²Use with 334170-001 graphics card only.

Deskpro EN

Large Form Factor

Memory*	Assembly	Spare Part	Option Part	System
128 MB DIMM, 66 MHz, SDRAM, ECC	270856-002	278099-001	270843-B21	All **
128 MB, PC700, RDRAM	402824-722	158264-001		T3
128 MB, RDRAM, ECC	402833-762	158264-001		T3
128MB, SDIMM, PC133	140133-001	170081-001		All
Memory AIMM, SDRAM, 133 MHz, CL3	176755-001	192012-001		DT/MT
Memory DIMM, SDRAM, 133 MHz, CL3	140134-001	192014-001		All
Memory Board, CRIMM, Continuity	010566-001	158265-001		T3

*100 MHz memory only on 810 Intel boards.

**66 MHz memory will not work with a 100 MHz processor.

Note: To avoid injury from electric shock and/or hot surfaces and to prevent damage to the system board and/or interface boards (such as NICs, video controllers, and memory), unplug the AC power cord from the wall outlet and allow the internal components of the PC to cool before servicing the unit.

¹Use with 166871-001 graphics card only.

²Use with 334170-001 graphics card only.

Modems	Assembly	Spare Part	System
56K, Cntrl/Based PCI	155431-B21	157071-B21	MT
56K, Fax, PCI		321510-B21	All
56K, Data (US)	294913-001	294912-001	All

Hard Drives	Assembly	Spare Part	System
3.2 GB, IDE, UDMA	314026-001	166873-001	All
4.3 GB, UWSCSI		179287-001	All
4.3 GB, UATA	314027-001	327646-001	All
4.3 GB, U66, 5400 rpm		134197-001	All
6.4 GB, IDE, UDMA	334118-001	166973-001	All
6.4 GB, U66, 5400 rpm		134198-001	All
8.4 GB, UATA		166981-001	All
9.1 GB, UWSCSI		179288-001	All
9.1 GB, UWSCSI U2		330521-001	All
9.1 GB UWSCSI, U2W, 10K rpm		143933-001	All
10.0 GB, UATA, 5400 rpm	178548-001	320662-001	All
10.0 GB, UATA, 7200 rpm		330520-001	All

Continued

Deskpro EN

Large Form Factor

Hard Drives	Assembly	Spare Part	System
10.0 GB, U66, 5400 rpm		134193-001	All
10.0 GB, U66, 7200 rpm	118179-004	135364-001	All
10.0 GB, U66, 7200 rpm, Quiet	176260-001	192058-001	All
10.0 GB, IBM, Titan 7200	330520-001	356046-001	All
13.5 GB, U66, 7200 rpm	118179-005	140515-001	All
14.4 GB, UATA		334806-001	All
15.0 GB, UATA, 7200 rpm		120419-001	All
15.0 GB, U66, 7200 rpm	167951-001	192060-001	All
15.0 GB, U66, 7200 rpm, Quiet	176261-001	192059-001	All
18.2 GB, UWSCSI, 7200 rpm		144577-001	All
20.0 GB, UATA, 7200 rpm		157403-001	All
20.0 GB, 7200 rpm	167965-002	180475-001	All
20.0 GB, 7200 rpm, Quiet	176005-010	180476-001	MT
22.6 GB, UATA, 7200 rpm		388511-001	All

Diskette Drives	Assembly	Spare Part	System
1.44 MB, 1", M3, Opal	122713-001	179161-001	All
1.44 MB	135262-001	158266-001	All
CD 48X, Opal	176140-001	187263-001	All
Drive Bracket, 3.5	179026-001	166923-001	650, 700 MHz

ROM Information	Config Code Table
System ROMPaq Family 686T3 (440 BX)	T1
System ROMPaq Family 686J1	T2
System ROMPaq Family 686J2	T3


Cables	Spare Part	System
Cable Assembly, NIC, Wake Up	166974-001	All
Cable Assembly, w/ SCSI, w/ Term, 2D, VS	179341-001	All
Cable Assembly, w/ SCSI U2	330532-001	All
Cable Assembly, Token Ring	172844-001	All
Cable, Ensonig Audio	149806-001	All
Cable, Single Conn, UATA	192264-001	DT/MT
Misc. Cable Kit	179182-001	All (T1,T2)
Misc. Cable Kit	166879-002	DT
Misc. Cable Kit	146019-001	All (T2)
SCSI Controller	247485-001	All

Power Supply/Battery	Assembly	Spare Part	System
Power Supply, 200W	334112-001	334169-001	All (T1)
Power Supply, 200 W	386461-001	103748-001	All (T2, T3)
Power Supply, 3.3 V, 200W, Dual Aux	161071-001	176764-001	DT
Battery, 3V, 200m, Lithium	166899-001	153099-001	All (T2)
Battery, 3V, 540m, Lithium	334149-001	179322-001	All (T1)


Deskpro EN

Large Form Factor

Memory Upgrade Chart

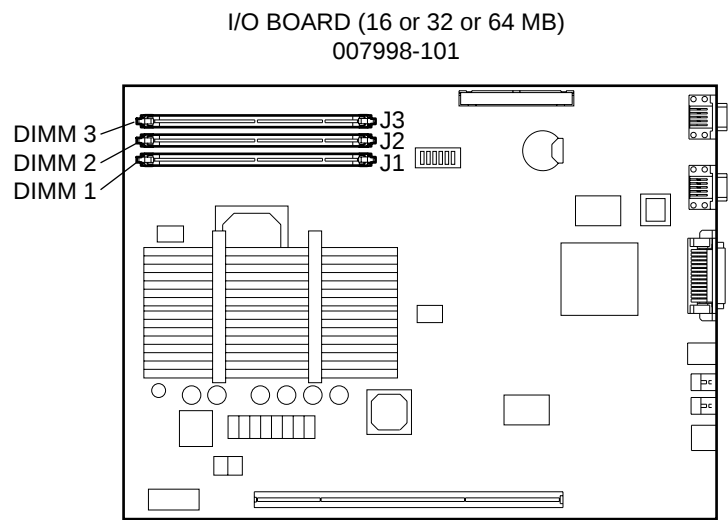

MAXIMUM MEMORY IS 512 MB SDRAM OR 768 MB SDRAM DIMMs



MEMORY OPTION NUMBERS LOCATED IN
"DESKPRO EN" MEMORY TABLE ABOVE

NOTE: SCSI models use ECC memory.