

Deskpro EP & SB

System/Processor Boards	Assembly	Spare Part
Processor Board, S381M+, MSR, APD	206608-001	207815-001
System Board w/ 256K Cache		162857-001
System Board (Intel 440 EX)	008312-101*	332857-001
System Board (Intel 440 BX)	009635-101**	166813-001
System Board (Intel 440 BX)	010233-101**	118053-001 ¹
System Board (Intel 440 BX, CuMine)	010582-101	164483-001 ²
System Board (Intel 810)	010174-101*	401963-001 ³
System Board (Intel 810e)	010546-101**	161422-001 ³
System Board (Intel 810e)	010697-101	187672-001

(*) 66 MHz systems. (**) 100 MHz systems.

¹Shipped with Intel PII and PIII BX Platform units after 2/23/99 (SNX908XXXXXXXXX).

²Began shipping in 3Q99. ³Began shipping in 4Q99. ⁴Began shipping in 1Q00.

Note: To avoid injury from electric shock and/or hot surfaces and to prevent damage to the system board and/or interface boards (such as NICs, video controllers, and memory), unplug the AC power cord from the wall outlet and allow the internal components of the PC to cool before servicing the unit.

Configuration (008312, 009635)

Jumper	Function	Setting	Description
E50 (440 BX) Jumper	Clear CMOS *	1-2 2-3	To clear CMOS, move jumper from pins "1-2" to pins "2-3" for 30 seconds. Then, return jumper to original location.
E50 (810) Button	Clear CMOS	NONE	To clear CMOS, locate CMOS button and press down for 5 seconds.

*Power must be disconnected. Unplug AC power cord prior to clearing CMOS.

SW1, Speed Settings* (008312, 009635)

66 MHz bus	100 MHz bus	S2	S3	S4	S5
233	350	OFF	OFF	ON	ON
266	400	ON	ON	OFF	ON
300	450	ON	OFF	OFF	ON
333	500	OFF	ON	OFF	ON

*As of January 1, 1999, all 300 MHz and faster Intel Celeron and Pentium processors are shipped with the processor speed preset. The preset speed will override any switch settings set on the system board for processor speed.

SW1, Password and Power Settings (008312, 009635)

S1 Password Control	S6 Power Switch
Disable Password = ON	Aux Power Supply on, Main Power Supply on = ON
Enable Password = OFF (Default)	Aux Power Supply on, Main Power Supply off = OFF

Deskpro EP & SB

KEYBOARD LIGHT COMBINATIONS FOR FAILSAFE BOOT BLOCK

Num Lock	Caps Lock	Scroll Lock	Meaning and Required Action
OFF	ON	OFF	System requires setup password. Enter the setup password. The light remains on until a valid password is entered.
ON	OFF	OFF	System could not boot from ROMPaq diskette because it is not present, is bad, or drive is not ready. Insert a valid ROMPaq diskette, turn power off and back on.
OFF	OFF	ON	ROM upgrade failed. Try another ROMPaq diskette. If light remains on, contact Compaq Customer Support.
ON	ON	ON	ROM upgrade successfully completed. Turn power off and back on to resume normal operation.

DIAGNOSTIC LEDS (440 BX UNIT)

Power LED	Color	Meaning
Flashing	Green	The unit is on and power supply is providing power to the system.
Slow-Blinking	Green	The unit is in a low-power state.
Fast-Blinking	Green	Processor-initiated thermal shutdown has occurred.

DIAGNOSTIC LEDS - KEYBOARD

Key	Beeps	Meaning and Required Action
Num Lock – Flashing	1 Short, 2 Long	System memory is absent. Ensure that compatible DIMMs are installed in the unit. If so, reseat the modules.
Caps Lock – Flashing	1 Long, 2 Short	Video graphics board is not installed or incorrectly initialized. Clear CMOS, and if the video board is present, remove and reseat.
Scroll Lock – Flashing	2 Long, 1 Short	System initialization failed and the unit cannot boot. The system configuration may be invalid. Clear CMOS and see the configuration label for jumper location and instructions.

DIAGNOSTIC LEDS (810 UNIT AND KEYBOARD)

LED	Color	LED Activity	State/Message
Power	Green	On	Computer on
Power	Green	1 blink per second	Normal suspend mode
Power	Red	4 blinks per second	CPU thermal shutdown
Power	Red	On	CPU not installed or working
Power	Red	1 blink per second	ROM error
Power	Red	1 blink per two or more seconds	Power supply crow bar
Power and Hard Drive	Red	On	Riser board not seated
Caps Lock	Green	Flashing	No video
Scroll Lock	Green	Flashing	System board failure, prior to video

Deskpro EP & SB

Configuration Code ¹	Assembly	System Board Spare Part	Form Factor
BYN2 – BYN7*	008312-101	332857-001	DT
BYPQ*	008312-101	332857-001	DT
BYP2 – BYP3*	008312-101	332857-001	DT
BYQ3 – BYQ4*	008312-101	332857-001	DT
BYRL – BYRQ*	008312-101	332857-001	DT
BYR3 – BYR4*	008312-101	332857-001	DT
BYNP *	008312-101	332857-001	DT
BYPP *	008312-101	332857-001	DT
BYQP *	008312-101	332857-001	DT
BYRP *	008312-101	332857-001	DT
BZTZ *	008312-101	332857-001	DT
BVD2 – BVD3**	009635-101	166813-001	DT
BVD2 – BVD3** ²	010233-101	118053-001	DT
BVF2 – BVF4**	009635-101	166813-001	DT
BVF2 – BVF4** ²	010233-101	118053-001	DT
BVDP – BVDS**	009635-101	166813-001	DT
BVDP – BVDS** ²	010233-101	118053-001	DT
BVFD – BVFP**	009635-101	166813-001	DT
BVFD – BVFP** ²	010233-101	118053-001	DT
BYQN**	009635-101	166813-001	DT
BYQN** ²	010233-101	118053-001	DT
BYRD*	008312-101	332857-001	DT
BYRH*	008312-101	332857-001	DT
BZGB*	008312-101	332857-001	DT
BZSZ **	009635-101	166813-001	DT
BZSZ ** ²	010233-101	118053-001	DT
CCJ4 – CCJ8**	009635-101	166813-001	DT
CCJ4 – CCJ8** ²	010233-101	118053-001	DT
CCJD – CCJY**	009635-101	166813-001	DT
CCJD – CCJY** ²	010233-101	118053-001	DT
CCK4 – CCK5**	009635-101	166813-001	DT
CCK4 – CCK5** ²	010233-101	118053-001	DT
CCKB – CCKP**	009635-101	166813-001	DT
CCKB – CCKP ** ²	010233-101	118053-001	DT
CCL4 – CCL6**	009635-101	166813-001	DT
CCL4 – CCL6** ²	010233-101	118053-001	DT
CCLB – CCLP**	009635-101	166813-001	DT
CCLB – CCLP ** ²	010233-101	118053-001	DT

¹Configuration codes are used to ID which system a particular spare part is used in. Refer to Desktop and Minitor Off-Menu Configurations appendix for CTO configuration information.

(*) 66 MHz systems. (**) 100 MHz systems. The system ID asterisks are repeated in the Configuration Code column in the table above and the SMB table below.

²Shipped with all Intel PII and PIII BX Platform units after February 23, 1999 (SNX908XXXXXXXXX).

Continued

Deskpro EP & SB

Configuration Code ¹	Assembly	System Board Spare Part	Form Factor
CCP2 – CCP5*	008312-101	332857-001	DT
CCPC – CCPP*	008312-101	332857-001	DT
CCR2 – CCR5*	008312-101	332857-001	DT
CCRB – CCRQ*	008312-101	332857-001	DT
CFZZ*	008312-101	332857-001	DT
CFZZ**	009635-101	166813-001	DT
CFZZ** ²	010233-101	118053-001	DT
CJFB*	008312-101	332857-001	DT
CJMP, CJNP**	010233-101	118053-001	DT
CJM2 – CJM8**	010233-101	118053-001	DT
CJN2 – CJN8**	010233-101	118053-001	DT
CJ8P – CJ9P**	010233-101	118053-001	DT
CL9P – CL9Q	008312-101	332857-001	DT
CL9V – CL9Y	008312-101	332857-001	DT
CL94 – CL96	008312-101	332857-001	DT
CMQB – CMQC**	009635-101	166813-001	DT
CMQB – CMQC ** ²	010233-101	118053-001	DT
CS82 – CS87*	010233-101	118053-001 162857-001	DT
CTD2 – CTD4*	010233-101	118053-001 162857-001	DT
CVN2 – CVN7	010174-101	401963-001	DT
CVP2 – CVP4	010174-101	401963-001	DT
CVNP	010174-101	401963-001	DT
CZF2 – CZF9*	010174-101	401963-001	DT
CZFB, CZFP*	010174-101	401963-001	DT
DC22 – DC27	010546-101	161422-001	DT
DC2P	010546-101	161422-001	DT
DCY2 – DCY5**	010546-101	161422-001	DT
DCYP**	010546-101	161422-001	DT
DCZ2 – DCZ7**	010546-101	161422-001	DT
DCZP	010546-101	161422-001	DT
DFX2 – DFX8**	010233-101	118053-001 162857-001	DT
DFX9**	010582-101	164483-001 162857-001	DT
DFXP	010233-101	118053-001 162857-001	DT
DGS2 – DGS5	010546-101	161422-001	DT
DGSP	010546-101	161422-001	DT
DK82, DK84 - DK89	010582-101	164483-001	DT
DK8P	010582-101	164483-001	DT

¹Configuration codes are used to ID which system a particular spare part is used in. Refer to Desktop and Minitower Off-Menu Configurations appendix for CTO configuration information.

(*) 66 MHz systems. (**) 100 MHz systems. The system ID asterisks are repeated in the Configuration Code column in the table above and the SMB table below.

²Shipped with all Intel PII and PIII BX Platform units after February 23, 1999 (SNX908XXXXXXXXX).

Continued

Deskpro EP & SB

Configuration Code ¹	Assembly	System Board Spare Part	Form Factor
DQK3, DKQ3	010582-101	164483-001	DT
DQKP	010582-101	164483-001	DT
DV86, DV96, DV98	010697-101	187672-001	MT
DW46, DW48 – DW49	010697-101	187672-001	MT
DWJ2, DWJ6, DWJ8	010697-101	187672-001	MT
FG82, FG83, FG92- FG95, FRM3, FRM4, FR21, FR22, FT31- FT34, FT51-FT54, FV51, FV52, FV71- FV73, FV81, FV82, FV91, FV92, JBJ3- JBJ5, JFG1-JFG3	206608-001	207815-001	DT

¹Configuration codes are used to ID which system a particular spare part is used in. Refer to Desktop and Minitorer Off-Menu Configurations appendix for CTO configuration information.

(*) 66 MHz systems. (**) 100 MHz systems. The system ID asterisks are repeated in the Configuration Code column in the table above and the SMB table below.

²Shipped with all Intel PII and PIII BX Platform units after February 23, 1999 (SNX908XXXXXXXXX).

Small Business Config Codes ¹	Assembly	System Board Spare Part	Form Factor
BYS2 – BYS3**	009635-101	166813-001	MT
BYT2 **	009635-101	166813-001	MT
BYV2 – BYV3*	008312-101	332857-001	MT
BZC2 *	008312-101	332857-001	DT
BZD2 – BZD3*	008312-101	332857-001	MT
BZF2 *	008312-101	332857-001	DT
BZG2 – BZG3*	008312-101	332857-001	MT
BZH2 *	008312-101	332857-001	DT

¹Configuration codes are used to ID which system a particular spare part is used in. Refer to Desktop and Minitorer Off-Menu Configurations appendix for CTO configuration information.

(*) 66 MHz systems. (**) 100 MHz systems. The system ID asterisks are repeated in the Configuration Code column in the table above and the SMB table below.

²Shipped with all Intel PII and PIII BX Platform units after February 23, 1999 (SNX908XXXXXXXXX). Need assembly number and configuration code when ordering spare.

Microprocessors	Config Code	Spare Part
266/66 Celeron, No Cache	BYN2 – BYN7; BYNP	332858-001
266/66 PII w/ Heat Sink	BYP2 – BYP3, BYPP	332862-001
300/66 PII w/ Heat Sink	BYQ3 – BYQ4, BYQP; BZG2	166881-001
300/66 Celeron, No Cache		167030-001
300A/66 Celeron w/ Heat Sink, 128K Cache	CCR2 – CCR5; CCRP	356136-001

Continued

Deskpro EP & SB

Microprocessors	Config Code	Spare Part
333/66 PII w/ Heat Sink	BYR3, 4, P	166887-001
333A/66 Celeron w/ Heat Sink, 128K Cache	CCP2 – CCP5; CCPP	356082-001
350/100 PII w/ Heat Sink		166874-001
366/66 128K w/ Heat Sink & Cover, Celeron		103253-001
400/66 128K w/ Heat Sink & Cover, Celeron		402126-001
400/100 PII w/ Heat Sink		166882-001
450/100 PII w/ Heat Sink		167032-001
450/100 PIII w/ Heat Sink	CJM2 – CJM8	122735-001
450/100 PIII w/ Heat Sink	DCY2 – DCY5, DCYP	164400-001
466/66 w/ Heat Sink, Celeron	CVN2 – CVN7; CVNP; CVP2 – CVP4	103747-001
466/66 w/ Heat Sink, Celeron	DV86	176740-001
500/66 w/ Heat Sink, Celeron	CZF2 – CZF9; CZFB, CZFP	155379-001
500/66 w/ Heat Sink, Celeron, APD	DV96, DV98, FG92, FG93, FT31, FT32, JFG1-JFG3	176741-001
500/100 PIII w/ Heat Sink	CJN2 – CJN8; DCZ2 – DCZ7, DCZP	164401-001
533/133 PIII w/ Heat Sink, CuMine	DC22 – DC27, DC2P	164402-001
550/100 PIII w/ Heat Sink	CS82 – CS87; CTD2 – CTD4	133840-001
550/100 PIII, w/ Heat Sink, CuMine	DWJ2, DWJ6, DWJ8	176743-001
550 MHz PIII, w/ 512K Cache	CS82-87, CTD2 – CTD4	158895-001
550/100 MHz PIII, Cu, APD	FR21, FR22, FT33, FT34, JFG1-JFG3	173553-001
566/66 Celeron	FV51, FV52, FV71-FV73, FV81, FV82, FV91, FV92, JBJ3-JBJ5, JFG1-JFG3	175863-001
600/100, APD	FG82, FG83, FT51, FT52, JFG1-JFG3	171260-001
600/100 PIII w/ Heat Sink	DFX2 – DFX9, DFXP	155592-001
600/133 PIII w/ Heat Sink, CuMine	DGS2 – DGS5, DGSP	164403-001
600/133 PIII, w/ Heat Sink, CuMine	DW46, DW48, DW49	176744-001
600 MHz PIII, w/ 512K Cache	DFX2 – DFX9, DFXP	162955-001
633/66 MHz Celeron	FV51, FV52, FV71-FV73, FV81, FV82, FV91, FV92,	191187-001
650/100, PIII, COP, APD	FRM3, FRM4, FT53, FT54, FG94, FG95, JFG1-JFG3	196364-001
650/100, PIII w/ Heat Sink, CuMine	DK82, DK84 – DK89, DK8P	164568-001
700/100, PIII w/ Heat Sink, CuMine	DQK2 – DQK3, DQKP	167135-001
700/100, CuMine	FG82, FG83, FG92- FG95, FRM3, FRM4, FR21, FR22, FT31- FT34, FT51-FT54, JBJ3-JBJ5, JFG1-JFG3	196365-001
733/133, CuMine	FV51, FV52, FV71-FV73, FV81, FV82, FV91, FV92,	170396-001
800/133, CuMine	FV51, FV52, FV71-FV73, FV81, FV82, FV91, FV92,	177709-001

Memory ¹	Assembly	Spare Part	System
2 MB SODIMM, SGRAM, ATI	314024-002	166971-001	* **
4 MB SODIMM, SGRAM, ATI	314025-002	166972-001	* **

Continued

Deskpro EP & SB

Memory ¹	Assembly	Spare Part	System
16 MB DIMM, 66 MHz	278030-002	278066-001	*
16 MB DIMM, 100 MHz, SDRAM	323010-001	166969-001	**
16 MB DIMM, 100 MHz, SDRAM, ECC	323014-001	166964-001	**
32 MB DIMM, 66 MHz	278031-002	278067-001	*
32 MB DIMM, 100 MHz	323011-001	166890-001	**
	323029-001		
32 MB DIMM, 100 MHz, SDRAM, ECC	323015-001	166968-001	**
64 MB DIMM, 66 MHz, SDRAM	270859-002	278095-001	*
64 MB DIMM, 100 MHz, SDRAM, APD	323012-001	179190-001	**
64 MB DIMM, 100 MHz, SDRAM, ECC	323016-001	166967-001	**
128 MB DIMM, 66 MHz, SDRAM	270858-001	278096-001	**
128 MB DIMM, 100 MHz, SDRAM	323013-001	166966-001	**
128 MB DIMM, 100 MHz, SDRAM, ECC	400421-001	141008-001	**

¹100 MHz memory only on 810 Intel boards.

(*) 66 MHz systems. (**) 100 MHz systems.

Note: To avoid injury from electric shock and/or hot surfaces and to prevent damage to the system board and/or interface boards (such as NICs, video controllers, and memory), unplug the AC power cord from the wall outlet and allow the internal components of the PC to cool before servicing the unit.

Miscellaneous	Assembly	Spare Part	System
Audio Sound Blaster PCI 128V		113897-001	* **
Drive Adapter, 3.5"	179026-002	179161-001	**
Drive Adapter		179026-008	* ** ***
Fan Assembly, 90MM	166809-001	166922-001	* **
	103263-001		
Fan, Chassis	166847-001	157749-001	**
Fan, Heat Sink, MSR, APD	206604-001	207812-001	FG82, FG83,
		207812-001	FG92- FG
			95FRM3,
			FRM4, FR21,
			FR22, FT31-
			FT34, FT51-
			FT54, FV51,
			FV52, FV71-
			FV73, FV81,
			FV82, FV91,
			FV92, JBJ3-
			JBJS, JFG1-
			JFG3
Keyboard	166516-006	269513-001	* **
	314036-001		

Continued

Deskpro EP & SB

Miscellaneous	Assembly	Spare Part	System
Keyboard, APD	206607-001	207842-001	FG82, FG83, FG92- FG95, FRM3, FRM4, FR21, FR22, FT31- FT34, FT51-FT54, FV51, FV52, FV71-FV73, FV81, FV82, FV91, FV92, JBJ3- JBJ5, JFG1- JFG3
Keyboard, Opal	294318-006 332835-006	166984-001	* ** **
Keyboard, Kor	206607-AD1	207842-AD1	FG82, FG83, FG92- FG95, FRM3, FRM4, FR21, FR22, FT31- FT34, FT51-FT54, FV51, FV52, FV71-FV73, FV81, FV82, FV91, FV92, JBJ3- JBJ5, JFG1- JFG3
Keyboard, Thai	206607-281	207842-281	FG82, FG83, FG92- FG95, FRM3, FRM4, FR21, FR22, FT31- FT34, FT51-FT54, FV51, FV52, FV71-FV73, FV81, FV82, FV91, FV92, JBJ3- JBJ5, JFG1- JFG3
Miscellaneous Hardware Kit	105427-003	166877-001	* ** **
Miscellaneous Plastics Kit	166766-001	166878-001	* ** **
Mouse, APD		207841-001	FG82, FG83, FG92- FG95, FRM3, FRM4, FR21, FR22, FT31-FT34, FT51-FT54, FV51, FV52, FV71-FV73, FV81, FV82, FV91, FV92, JBJ3- JBJ5, JFG1- JFG3
Mouse, Opal	141649-006	166861-001	* ** **

Continued

Deskpro EP & SB

Miscellaneous	Assembly	Spare Part	System
Mouse, MS Intellimouse		317863-001	* **
Power Cord – United Kingdom	100613-001	121259-001	* **
Speaker	247356-001	166507-001	* **
Speaker, 5 Watt	356027-001	167029-001	* **
Speaker	167029-001	118308-001	*
Speaker	356080-002	158267-001	* **
Titan Sound Card	009868-001	356081-001	**

(*) 66 MHz systems. (**) 100 MHz systems. (***) 133 MHz systems.

Removable Storage	Assembly	Spare Part	System
CD Drive, 48x, MSR, APD	207845-001	207846-001	FG82, FG93, FG95, FRM3, FR22, FT32, FT52, FT54, FV51, FV52, FV71-FV73, FV81, FV82, FV91, FV92, JBJ4, JBJ5, JFG1-JFG3
CD-ROM, 24X, Tray	166832-701	166869-001	* **
CD-ROM, 32X	179137-701	327659-001	* **
CD-ROM, 40X, ATX/BX	118121-001	400807-001	**
DVD GEN2	328104-701	167031-001	**
DVD GEN3	356146-701	386128-001	**
DVD, 10X/40X		161430-001	**
LS120, 1X		358232-001	* **
Tape Drive, TR5 10/20 GB		480081-001	**

(*) 66 MHz systems. (**) 100 MHz systems or higher.

Controller Boards ¹	Assembly	Spare Part	System
Audio Board, ESS 1869, 5W	009868-001	356081-001	**
Audio Board, ESS 1869	009666-001	332859-001	* **
Audio, PCA, PCI, ES1373	159579-001	167984-001	**
Audio Sound Blaster ES1373, PCI, 128V		113897-001	**
Graphics, ATI, Rage Pro, IIC	332836-002	332865-001	*
Graphics, Matrox G100	356007-001	328011-001	* **
Graphics, Matrox, G200, ATX	356018-002	167033-001	**
Graphics, Matrox, G200, ATX	400778-002	402125-001	** ²
Graphics, Matrox Millennium, G400, 4X, AGP, 16MB		400438-001	**
Graphics, NVIDIA, NV3, AGP	322727-002	322747-001	**
Graphics, NVIDIA, TNT 3d		386875-001	* **
Graphics, PCA, G400, ATX	400273-002	400438-001	**
Graphics, Rage Pro, 1X, AGP	008061-001	166871-001	* **
Graphics, Rage Pro, 2X, AGP	334134-001	334170-001	* **
NIC, PCI, 10/100, 3COM	179159-001	179167-001	**
NIC, 10/100 TX PCI, WOL/AOL		118042-001	**

Continued

Deskpro EP & SB

Controller Boards ¹	Assembly	Spare Part	System
NIC, PCI, 10/100, WOL, Intel		323553-001	**
NIC, PCI, Fast Ethernet 10/100 WOL, NC3121 Intel	323557-001	323556-001	**
NIC, Wide-Ultra2 SCSI		330522-001	**

¹Configuration codes are used to ID which system a particular spare part is used in.

(*) 66 MHz systems. (**) 100 MHz systems or higher.

²Shipped on all PII and PIII units after February 23, 1999 (SNX908XXXXXXXXX).

Note: To avoid injury from electric shock and/or hot surfaces and to prevent damage to the system board and/or interface boards (such as NICs, video controllers, and memory), unplug the AC power cord from the wall outlet and allow the internal components of the PC to cool before servicing the unit.

Hard Drives	Assembly	Spare Part	System
2.1 GB, UATA	262475-002	332861-001	*
3.2 GB, UDMA	262477-002	332866-001	*
3.2 GB, UDMA	314026-001	166873-001	* **
4.3 GB, UATA	314027-001	327646-001	* **
4.3 GB, UATA	317879-001	331928-001	* **
4.3 GB, 66/54	118179-001	134197-001	*
5.1 GB, ATA	178938-001	166872-001	* **
6.4 GB, IDE	298066-001	166973-001	* **
6.4 GB, U66	118179-002	134198-001	*
8.1 GB, UDMA	166978-001	166981-001	* **
8.4 GB, APD	158739-001	163804-001	FG82, FG83, FG92, FG93, FRM3, FRM4, FR21, FR22 FV51, FV52, FV71-FV73, FV81, FV82, FV91, FV92, JFG1-JFG3
10.0 GB, UDMA	356038-001	320662-001	**
10.0 GB, 5400, APD	173339-001	197797-001	FG94, FG95, FT31- FT34, FT51-FT54, FV51, FV52, FV71-FV73, FV81, FV82, FV91, FV92, JBJ3- JBJ5, JFG1- JFG3
10.0 GB, 7200 rpm	118179-004	135364-001	**
13.5 GB, U66	118179-005	140515-001	**
15 GB, 5400		202903-001	FV51, FV52, FV71-FV73, FV81, FV82, FV91, FV92,
15 GB Ultra ATA 7200 rpm	103419-001	120419-001	**
18.2 GB Wide-Ultra2 SCSI 7200 rpm		144577-001	**
20 GB Ultra ATA 7200 rpm	103741-001	157403-001	**
22.6 GB Ultra ATA 7200 rpm	386912-001	388511-001	**

(*) 66 MHz systems. (**) 100 MHz systems.

Deskpro EP & SB

33.6/56U Kb/s Data (SMB)

Country	Assembly	Spare Part	System
U.S.	294913-001	294912-001	SMB

Diskette Drives	Assembly	Spare Part	System
1.44 MB, APD	206606-001	207840-001	FG82, FG83, FG92- FG95, FRM3, FRM4, FR21, FR22, FT31-34, FT51-54, FV51, FV52, FV71-FV73, FV81, FV82, FV91, FV92, JBJ3- JBJ5, JFG1- JFG3
1.44 MB, 1"	141087-702	179161-001	All
1.44 MB, Generic	388617-702/703/705/706	123958-001	466 MHz
Drive Adapter, 3.5"	179026-002	166923-001	All
Zip Drive, Iomega, 100 ATAPI		386561-001	All

Cables	Assembly	Spare Part	System
Cable Assembly, NIC, Wake Up		166974-001	All
Cable Kit, APD		207810-001	FG82, FG83, FG92- FG95, FRM3, FRM4, FR21, FR22, FT31-34, FT51-54, FV51, FV52, FV71-FV73, FV81, FV82, FV91, FV92, JBJ3- JBJ5, JFG1- JFG3
Cable Kit, Misc.	166838-001	166879-001	Intel BX
Cable Kit, Misc.		166879-002	Intel 810e
Power Cable/Switch Kit	166784-001	166925-001	All
UATA HD/CD ROM Cable	270847-001	278296-001	Intel 810 ¹

¹Use diskette drive cable w/ twist (assembly number 143218-001) and hard drive cable (assembly number 108950-007) on Intel 810 units only.

ROM Information	System
686 J1	810
686 T1	66 MHz (BX)
686 T2	100 MHz (BX)


Deskpro EP & SB

Power Supply/Battery	Assembly	Spare Part	System
Battery, 3V, Lithium, CR2032	298031-001	234556-001	All
Power Supply, 145 W	332829-001	332863-001	All
Power Supply, 145 W		174871-001	Intel 810e
Power Supply, 145 W, APD		207817-001	FG82, FG83, FG92- FG95, FRM3, FRM4, FR21, FR22, FT31-34, FT51- FT54, FV51, FV52, FV71- FV73, FV81, FV82, FV91, FV92, JBJ3- JBJ5, JFG1- JFG3
Power Supply, 200 W	308356-001	166814-001	All
Power Supply, 200 W	386461-001	103748-001	466, 600 MHz


Deskpro EP & SB

Memory Upgrade Chart

I/O BOARD (16 MB)
008312-101 (66 MHz)

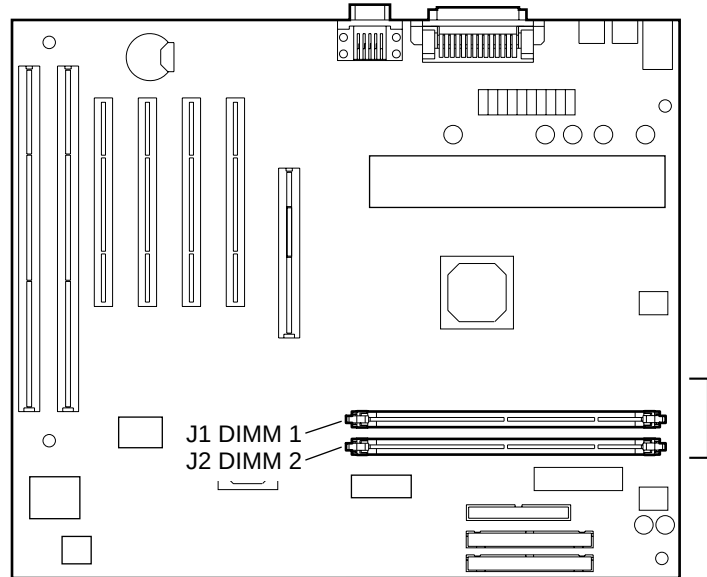

A MAXIMUM OF 256 MB TOTAL MEMORY




- 16-MB (SDRAM) DIMMS 66 MHz, - OPTION PN 242803-B21
- 32-MB (SDRAM) DIMMS 66 MHz, - OPTION PN 242804-B21
- 64-MB (SDRAM) DIMMS 66 MHz, - OPTION PN 242805-B21
- 128-MB (SDRAM) DIMMS 66 MHz, - OPTION PN 270812-B21


Deskpro EP & SB

Memory Upgrade Chart

I/O BOARD (16 MB)
009635-101 (100 MHz)

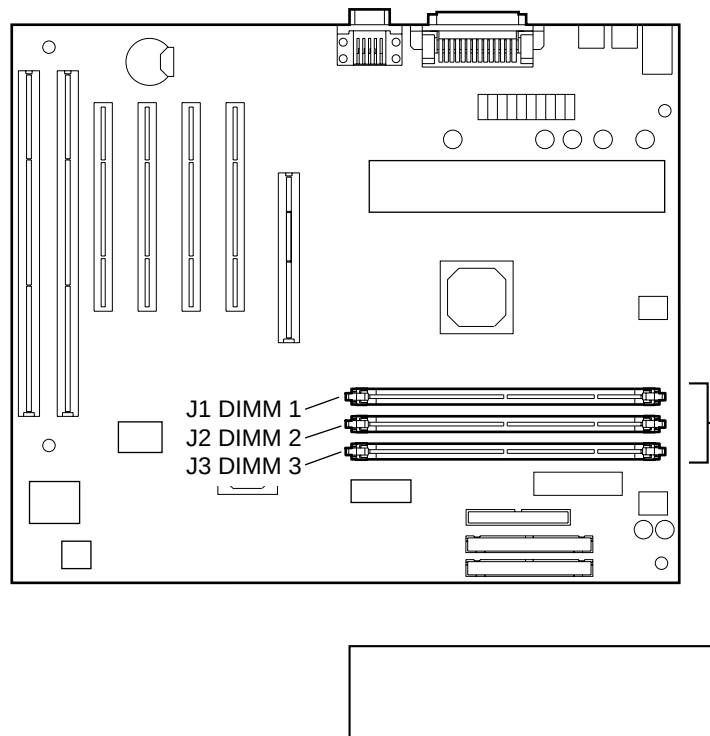

A MAXIMUM OF 384 MB TOTAL MEMORY




- 16-MB (SDRAM) DIMMS 100MHz, - OPTION PN 166615-B21
- 32-MB (SDRAM) DIMMS 100MHz, - OPTION PN 166616-B21
- 64-MB (SDRAM) DIMMS 100MHz, - OPTION PN 166617-B21
- 128-MB (SDRAM) DIMMS 100MHz, - OPTION PN 166618-B21

Deskpro EP & SB

Memory Upgrade Chart

SYSTEM BOARD
010174-101

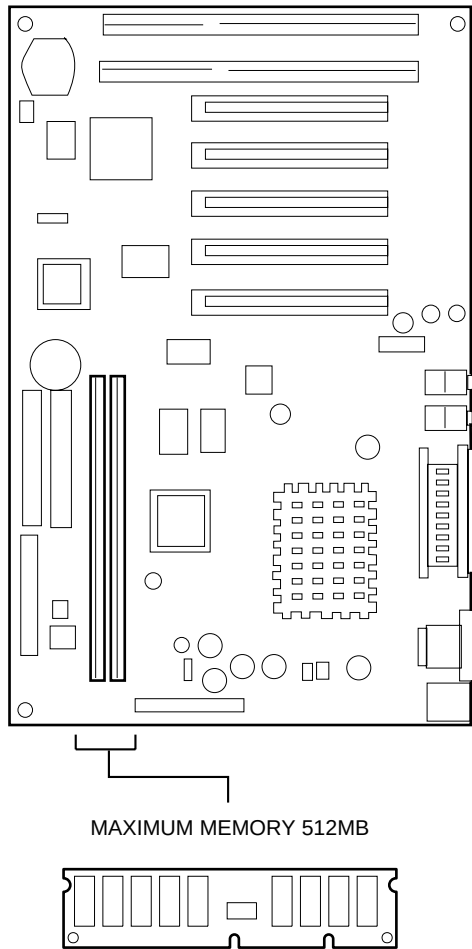

MAXIMUM MEMORY 512MB


32-MB DIMM, 100MHz, SDRAM - OPTION PN 178924-001
64-MB DIMM, 100MHz, SDRAM - OPTION PN 178925-001
96-MB DIMM, 100MHz, SDRAM - OPTION PN 166993-001
128-MB DIMM, 100MHz, SDRAM - OPTION PN 178543-001
256-MB DIMM, 100MHz, SDRAM - OPTION PN 327947-001

64-MB DIMM, 100MHz, SDRAM ECC - OPTION PN 178545-001
128-MB DIMM, 100MHz, SDRAM ECC - OPTION PN 178542-001
256-MB DIMM, 100MHz, SDRAM ECC - OPTION PN 327948-001


Deskpro EP & SB

Memory Upgrade Chart

SYSTEM BOARDS
010546-101
010697-101

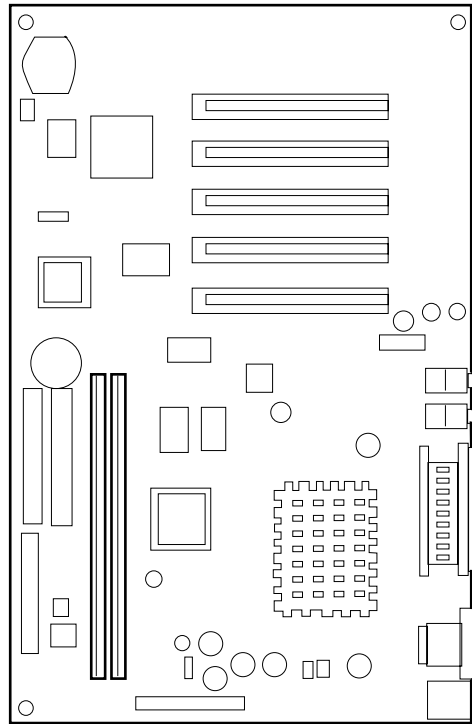

MAXIMUM MEMORY 512 MB



64-MB DIMM, 100MHz, SDRAM - OPTION PN 178925-001
128-MB DIMM, 100MHz, SDRAM - OPTION PN 178543-001
256-MB DIMM, 100MHz, SDRAM - OPTION PN 327947-001