

ProLiant DL380

System Boards	Assembly	Spare Part
System I/O Board, w/o Processor	010156-103	157824-001

SW2 Switch Settings

SW	Function	Default Setting
1	Embedded Video Disable	Off
2	Configuration Lock	Off
3	Rack Mount	On*
4	Diskette Drive Boot Override	Off
5	Password Disable	Off
6	Maintenance	Off

*Must be set as shown for the system to operate correctly.

Configuration Code	Model	System Board Spare Part
DKM1	Rack 667	157824-001
DKN1	Rack 733	157824-001
DKNZ*	CTO Base Unit	157824-001
DX51	Tower, 800	157824-001
DX61	Rack, 800	157824-001
FD41	Rack 800	157824-001
FD51	Rack 866	157824-001
FK41	Rack 933	157824-001
FSB1	Rack 1000	157824-001

*Base part number 161548-999

Microprocessors	Assembly	Spare Part
667/133 MHz, w/ Heat Sink	137365-002	166109-001
733/133 MHz, w/ Heat Sink	137365-004	166108-001
800/133 MHz, w/ Heat Sink	137365-011	187781-001
866/133 MHz, w/ Heat Sink	137365-006	187782-001
933/133 MHz, w/ Heat Sink	137365-012	196628-001
1000/133 MHz, w/ Heat Sink	137365-307	221536-001

Memory Boards/Modules	Assembly	Spare Part
64 MB DIMM, SDRAM	127004-021	159225-001
128 MB DIMM, SDRAM	127007-021	159226-001
128 MB Module, SDRAM	127007-031	164278-001
256 MB DIMM, SDRAM	127005-021	159304-001
256 MB DIMM, SDRAM	127005-031	159377-001
512 MB, DIMM, SDRAM	127006-031	159227-001
512 MB DIMM, SDRAM, 256	127006-041	177628-001
1 GB, SDRAM	127008-041	163902-001

Miscellaneous	Assembly	Spare Part
Baffle	161487-001	163327-001
Bezel, Drive Cage	241330-001	296200-001
Bezel, Rack	333132-004	218257-001
Board, Backplane, 64/32, PCI, 4 Slot	010159-001	159128-001
Board, Power Supply, Hot-Pluggable	007829-002	333112-001
Board, ROC Raid, 16 MB	010284-001	158855-001
Board, Simplex, SCSI, LVD, CPR	010060-001	387090-001
Cage, LVD, 4 Bay	329316-004	159137-001

ProLiant DL380

Miscellaneous	Assembly	Spare Part
Chassis	333149-004	212943-001
Cover, Top	333129-001	327313-001
Drive Cage, LVD, 2 Bay	388635-002	144087-001
CPU Fan	157383-001	159203-001
Power Supply Fan	327412-003	173907-001
Fan, 92mm, 110 CFM CPU, 1000 MHz	157383-003	216472-001
Hardware Kit, Miscellaneous		159542-001
I/O Option, Slot 1 Installation Tool	270298-003	216394-001
Plastics Kit, Miscellaneous		327319-001
Power Switch w/ LED and Cable	333347-005	144086-001
Rack Front Plate	333132-004	218527-001
Rack Mounting Kit	163737-011	327310-001
Voltage Regulator Board	155681-001	157825-001

Hard Drives	Assembly	Spare Part
Blank Tray	349448-001	122759-001

CD-ROMs	Assembly	Spare Part
24X, 50 Pin, Opal	314118-509	323332-001

Diskette Drives	Assembly	Spare Part
1.44 MB, Opal	141087-705	179161-001


Cables	Assembly	Spare Part
Cable Kit, Miscellaneous Power		327919-001
Cable Kit, Miscellaneous Signal	288365-003	159129-001

Battery/Power Supply	Assembly	Spare Part
Battery, 3V, 540m, Ah, Lithium, CR2450N	334149-001	179322-001
Power Supply, 275W, Hot-Plug	108859-001	159125-001


ProLiant DL380

Memory Upgrade Chart

SYSTEM BOARD
157824-001
(128 MB)

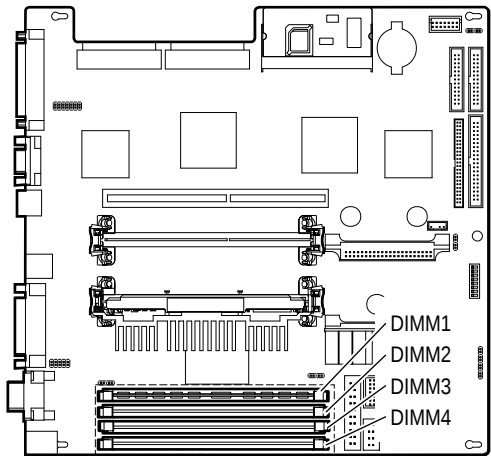

A MAXIMUM OF 4 GB TOTAL MEMORY



64-MB 133 MHz SDRAM DIMMs	OPTION PN 128276-B21
128-MB 133 MHz SDRAM DIMMs	OPTION PN 128277-B21
256-MB 133 MHz SDRAM DIMMs	OPTION PN 128278-B21
512-MB 133 MHz SDRAM DIMMs	OPTION PN 128279-B21
1-GB 133 MHz SDRAM DIMMs	OPTION PN 128280-B21

NOTE: The ProLiant DL380 will support 1-GB DIMMs when available