

ProLinea Net1/25 & 1/33s

System Boards	Assembly	Spare Part
486SX/25 Processor w/ Ethernet	003266-003	160614-003 DISCONTINUED
486SX/25 Processor w/ Token Ring	003266-003	160614-004 DISCONTINUED
486SX/33 Processor w/ Ethernet	003614-003	163628-003 DISCONTINUED
486SX/33 Processor w/ Token Ring	003614-003	163628-004 DISCONTINUED

Jumper Settings - Processor Board (003266, 003614)

Jumper	Function	Pins *	Settings Function
P1	Speed Select	1,2 2,3	Select processor speed 25 or 50 MHZ Select processor speed 33 or 66 MHz
P2	Processor Upgrade Socket Select	1,2, PQFP * 2,3, PGA *	Socket not used Socket used
P3- P4	Processor Select	1,2 2,3 3,4	486SX (PQFP) ** 486DX ** 486DX2 ** 487SX ** Overdrive ** 486SX (PGA)
P5		1,2 2,3 3,4	486SX (PQFP) ** 486DX ** 486DX2 ** 487SX *** Overdrive *** 486SX (PGA)
P6	Password Erase		Remove and replace jumper P6 to clear password.
P7	Modem ROM Select (if P7 is installed)	1,2 2,3	Internal Modem ROM External Modem ROM
J16	Replacement Battery Connector		Use only 4.5 v alkaline computer battery.

* The 486SX (PQFP) is soldered to the board (no socket). All other type PGA processors plug into the processor socket.

** ODP.

*** ODP.

Memory Boards	Assembly	Spare Part
1 MB Memory Module	118666-004	141752-001
2 MB Memory Module	118667-004	141753-001
4 MB Memory Module	118665-004 137853-002 137845-002	141754-001
8 MB Memory Module	129041-002	141755-001

Microprocessors	Spare Part	System
486DX/33	194495-001	Option
486DX2/50	163661-001	Option
486DX2/66	194395-001	Option

ProLinea Net1/25 & 1/33s

Controller Boards	Assembly	Spare Part
6260 SCSI-2 Controller *	004004	146993-001
Token Ring Pluggable	004066	142837-001 DISCONTINUED
Ethernet Pluggable	003445	160778-001 DISCONTINUED

* See Multiproduct Boards Appendix, for settings.

Miscellaneous Internal	Assembly	Spare Part
Backplane (2-slot)	004009	160676-001 DISCONTINUED
AUI to BNC Transceiver (Net1/33S)		142117-001
SpeedPac 144/I Data and Fax Modem ¹	003002	147453-001
Serial/Parallel ²	000990	106886-001
Monitor Kit (non-MPRII) * - 3200		160726-001
Monitor Kit - 3210 **		160726-002
Monitor Kit - 3220 **		160726-005
Monitor Kit - 3220 ***		160726-004

* North America, Latin America, Asia-Pacific. See Multiproduct Boards Appendix, for settings.

** Europe See Modem Configuration Appendix for settings.

*** Australia/New Zealand.

¹ See Modem Configuration Appendix for settings.

² See Multiproduct Boards Appendix for settings.

Hard Drives

Size	Type	Interleave	Integrated	Min ROM	Spare Part
100 MB	32	1:1	Y	063093	160701-001 DISCONTINUED
200 MB	51	1:1	Y	063093	160702-001
240 MB	1	1:1	Y	063093	129490-001
340 MB	63	1:1	Y	063093	171923-001 DISCONTINUED

Diskette Drive	Spare Part
1.44 MB Three-mode	160788-201

CD-ROM Drives	Spare Part
External Tray Load CD-ROM	199430-001
External DualSpeed CD-ROM	133882-001

Cable Function	Used With	Spare Part
Drive Power	All Drives	160745-001
Drive Signal	Hard Drive	160744-001
Drive Signal	Diskette Drive	160743-001 DISCONTINUED
LED Signal	Lights	160742-001
Speaker Assembly	Speaker	160741-001 DISCONTINUED

Processor/Coprocessor Locations

Processor (486SX/25)	Upgrade Socket
U50	U50

ProLinea Net1/25 & 1/33s

System/Video ROM Revisions (Spare Part 160792-001) DISCONTINUED

Revision	Number on ROM	Spare Part
	160730-007	160792-001 DISCONTINUED

Boot ROM

Controller/Type	Number on ROM	Spare Part
Token Ring - Novell	163623-001	199970-001
Token Ring - Microsoft	163622-001	199971-001
Ethernet - Novell	163625-001	160842-001
Ethernet - Microsoft	163624-001	160844-001


Power Supply/Battery

	Spare Part
Clock/Battery (4.5v alkaline)	160274-001


ProLinea Net1/25 & 1/33s

Expanded Memory

PROCESSOR BOARD WITH 4 MB MEMORY
Assy # 003266 & 003614

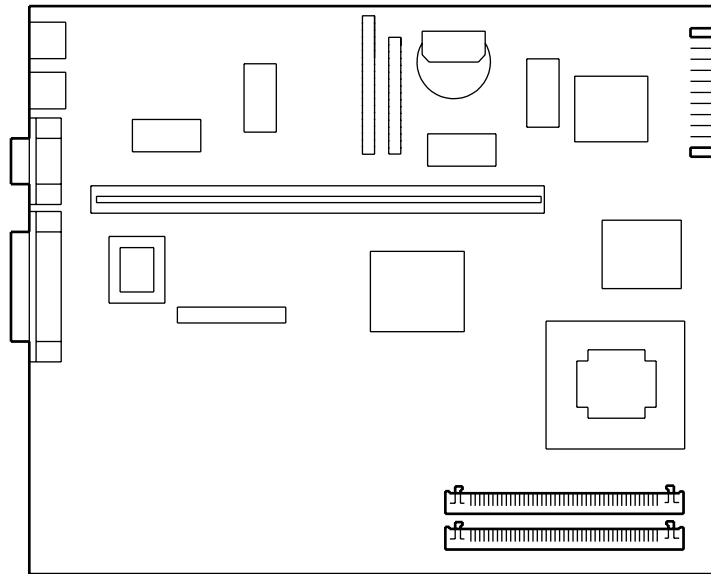

ADD 1 OR 2 OF THE FOLLOWING
UP TO 20-MB TOTAL SYSTEM MEMORY

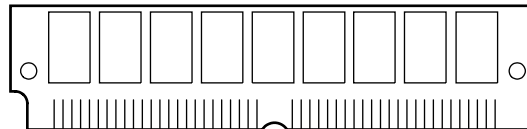

1-MB MEMORY MODULE
SPARE PN 141752-001

2-MB MEMORY MODULE
OPTION PN 141683-001

4-MB MEMORY MODULE
OPTION PN 141684-001, OR 163679-001

8-MB MEMORY MODULE
OPTION PN 141685-001, OR 163680-001