

Prosignia 320 SMB

System/Processor Boards	Assembly	Spare Part
Processor Board, Intel, BI440ZX	136241-101	136339-001

Configuration Code	Assembly	System Bd Spare Part
CVTP	136241-101	136339-001
CVVP	136241-101	136339-001
CVWP	136241-101	136339-001

Configuration (136241)

Jumper	Function	Setting	Description
E50	Normal (default)	1-2	To clear CMOS, move jumper from pins
	Clear CMOS*	2-3	"1-2" to pins "2-3" for 60 seconds. Then, return jumper to original location.

*Power must be disconnected. Unplug AC power cord prior to clearing CMOS.

BIOS Setup Configuration Jumper Settings

Function/Mode	Jumper Setting	Configuration
Normal	1-2	BIOS uses current configuration information and passwords for booting.
Configure	2-3	After the POST runs, Setup runs automatically. The maintenance menu is displayed.
Recovery	none	BIOS attempts to recover the BIOS configuration. A recovery diskette is required.

Microprocessors	Assembly	Spare Part
Processor, 400 w/ Heat Sink	401264-004	152295-001
Processor, 433 w/ Heat Sink	401264-005	152296-001
Processor, 466 w/ Heat Sink	401264-006	149801-001

Memory	Assembly	Spare Part
32 MB DIMM	278031-002	278067-001
32 MB Module	323011-001	166890-001
64 MB DIMM	323012-001	179190-001
64 MB Module	270859-002	278095-001
128 MB SDRAM	323013-001	166966-001
128 MB SDRAM Module		278096-001

Modems	Assembly	Spare Part
56K, PCI	337550-002	337559-002
DSL/V.90, PCI	352374-001	387518-001
33.6/56U, Data/Fax	294900-001	294912-001

Miscellaneous	Assembly	Spare Part
Power Switch w/ Cable	136240-001	136340-001
Creative Sound Blaster	118006-001	120418-001
Keyboard, Opal	294319-006	166984-001
Keyboard, Internet	126739-006	135510-001
Intellimouse, USB	317857-001	317863-001
I/O Panel	146041-001	149805-001
Speaker, SBS52	402548-001	125773-001

Prosignia 320 SMB

Controller Boards	Assembly	Spare Part
NIC PCI 10/100	179338-001	179167-001
NIC PCI 10/100	332557-001	323553-001

Graphics Boards	Assembly	Spare Part
STB NVIDIA TNT 3D, AGP	330751-002	387577-001
Graphics Board, NV4, ATX	330751-003	113355-001
Graphics Board	356069-001	166871-001
ATI XC 8M	133564-002	139112-001

CD-ROM Drive	Assembly	Spare Part
32X	179137-706	327659-001
40X, IDE	388036-711	400807-001
52X	108933-713	120696-001
6X/32X DVD, Opal	402533-712	120417-001
DVD Decoder		131598-001

Hard Drives	Assembly	Spare Part
4.3 GB	112222-001	143466-001
6.4 GB	112223-001	143467-001
8.4 GB	112224-001	143468-001
9.1 GB, 7200 rpm	386909-001	123634-001
15.5 GB, 7200 rpm	386910-001	123635-001
18 GB	386911-001	388510-001
22 GB	386912-001	388511-001

Diskette Drives	Assembly	Spare Part
Zip Drive w/ Bracket	270928-703	386561-001
3.5"	136239-001	136338-001


Cables	Assembly	Spare Part
Cable Assembly, CD, Audio	387527-001	149806-001
Miscellaneous Cable Kit	108950-007	146019-001

Power Supply/Battery	Assembly	Spare Part
Power Supply, 145W	136328-001	136337-001


Prosignia 320 SMB

MEMORY UPGRADE CHART

PROCESSOR BOARD
136241-101

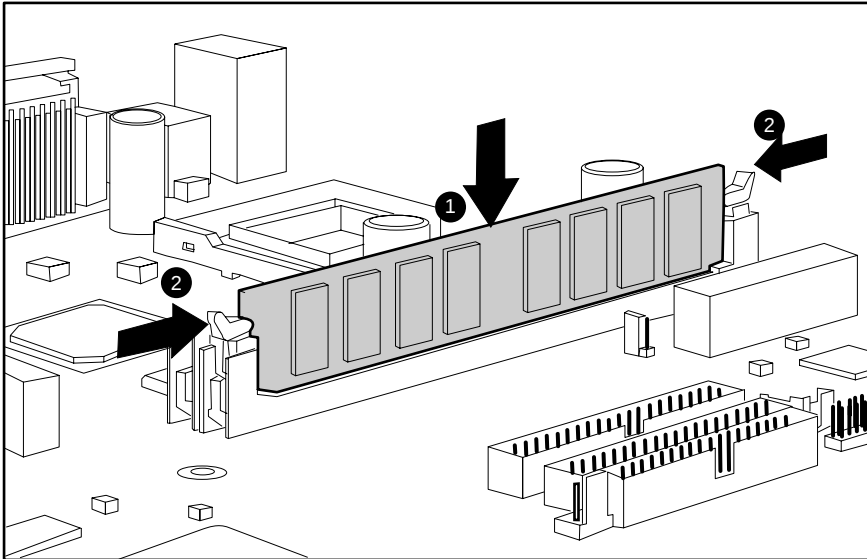

A MAXIMUM OF 256 MB TOTAL MEMORY.



32-MB 66 MHz SDRAM DIMMs - OPTION PN 242804-B21

64-MB 66 MHz SDRAM DIMMs - OPTION PN 270859-B21

128-MB 66 MHz SDRAM DIMMs - OPTION PN 270812-B21

64-MB 100 MHz SDRAM DIMMs - OPTION PN 166613-B21

128-MB 100 MHz SDRAM DIMMs - OPTION PN 166614-B21