

SLT 386s/20

System Boards	Assembly	Spare Part
386SX System Board -DISCONTINUED	001382	118359-001

Switch Settings (System Board 001382)

S1 Settings	Function
S1-1 ON *	Reserved
OFF	Reserved
S1-2 OFF *	Power-on password enabled
ON	Power-on password disabled

*Default.

Memory Boards	Assembly	Spare Part
1 MB Memory Module	001385-001	118357-001 DISCONTINUED
2 MB Memory Module	001385-002	118356-001 DISCONTINUED
4 MB Memory Module	001394	118358-001 DISCONTINUED

Video Boards *	Assembly	Spare Part
Video Graphics Ctlr. Board (VGC) ** ***	000806	109253-001 DISCONTINUED
Video Graphics Ctlr. Board (VGC) ** ***	001241	109253-001 DISCONTINUED
Video Graphics Ctlr. Board (VGC) ** ***	109360	109253-001 DISCONTINUED
Advanced Graphics 1024 Board ***	109958	114201-001
Advanced Graphics Memory Board	109959	114202-001
QVision 1024/I Controller Board ***	002163	126655-001

* Used in Desktop Expansion Base only.

** Required for the Advanced Graphics Color Monitor to display both normal VGA and high-resolution video (single-monitor configuration).

*** See Volume 2 Appendix, Multiproduct Boards, for settings.

Hard Drives

Size	Type	Interleave	Integrated	Min ROM	Spare Part
60 MB	55	1:1	Y	A.1	Not Available
120 MB	50	1:1	Y	A.1	118360-001 ¹ DISCONTINUED

¹ Except Europe.

² Europe only.

Tape Drives	Spare Part	Tape Cartridge	Spare Part
40/60 MB ^{1,2} (1/2 Height)	112524-001	40 MB (DC2000)	108142-001
60 MB ^{1,2} (1/3Height)	131338-001	60 MB (DC2060)	122086-001
80/120 MB ^{1,2} (1/2 Height)	122087-001	80 MB (DC2080)	116966-001
80/120 MB ^{1,2,3} (1/3Height)	131337-001	120 MB (DC2120)	116967-001
120/250 MB ^{1,2,3} (1/2 Height)	197490-001	80 MB (DC2080)	116966-001
		120 MB (DC2120)	116967-001
		120 MB (DC2120)	116967-001

¹ Used in External Storage Module only.

² With compression.

³ Used in Desktop Expansion Base only.

Diskette Drives	Spare Part
1.2 MB	112566-001 (Used in External Storage Module only.)
360 KB	112567-001 (Used in External Storage Module only.)
1.44 MB	110356-001

SLT 386s/20

Miscellaneous Internal	Assembly	Spare Part
Serial Interface Board	000854	110360-001
2400 Baud Internal Modem *	000866	110352-001
		DISCONTINUED
Display Panel		110451-001
Backlight Inverter Board	000908	110452-001
LED Indicator	001478	118353-001
Extender Connector **	000872	110600-001
CPU Connector **	001340	110601-001
Enhanced 2400 Baud Internal Modem	001556	118413-001
		DISCONTINUED

* Refer to page E-6 for country-specific Enhanced 2400 Baud Internal Modem Assembly and Spare Part information.

** Used in Desktop Expansion Base only.

Miscellaneous External	Option	Spare Part
External Numeric Keypad	110052-001 (English) 110052-003 (French)	110454-001
Desktop Expansion Base	110059-001	Not available
Battery Pack	DISCONTINUED	110351-001
CD-ROM Adapter	DISCONTINUED	110875-001
Automobile Adapter	110288-001	110708-001**
External Battery Charger	110700-001	110706-001
External Storage Module *	110281-001 (110V) 110281-002 (220V)	Not available
External Storage Module	117079-001 (110V) 117079-002 (220V)	Not available
AC Adapter	110888-001	110353-001
AC Adapter	DISCONTINUED	118460-001

* Requires Adapter Cable (Spare Part 125606-001).

** Discontinued (Unavailable)

Cables	Used With	Spare Part
Mass Storage Power Cable	All Hard Drives	110007-001
Hard Drive Signal Cable	All Hard Drives	110008-001
Diskette Power/Signal Cable	Internal Diskette	110005-001
Signal Cable	External Storage Module	110268-001
Power Cable	External Storage Module	110270-001
Ground Cable	Display	110503-001
Power Cord	AC Adapter	110543-001
Telephone Cable *	Modem	112666-001
VGA Pass-Through Cable	Advanced Graphics	114229-001
Adapter Cable	External Storage Module (110281-001 and 110281-002)	125606-001
Signal Cable	External Storage Module	117138-001
Cable Kit (3 Cables)	DISCONTINUED	118368-001
Egress Power Cable	DISCONTINUED (118460-001)	125605-001

* U.S. and Canada only.

SLT 386s/20

External Storage Module Jumper Settings

Jumper	Function
Disk	Enables diskette drive
Tape	Enables tape drive

Processor/Coprocessor Locations

Processor (386SX-20)	Coprocessor (387SX-20)
U56	U75

System ROM Locations

U73 ODD	U74 EVEN
---------	----------

System ROM Revisions (Spare Part 118402-001) DISCONTINUED

Revision	Number on ODD ROM	Number on EVEN ROM
A.1	118283-001	118284-001
050490	118283-002	118284-002
051590	118283-003	118284-003
052990	118283-004	118284-004
082790	118283-005	118284-005

Power Supply/Battery


Spare Part

AC Adapter Power Supply -DISCONTINUED	118460-001
DC Internal Power Supply	110361-001
Desktop Expansion Base Power Supply	110599-001
External Storage Module Power Supply	119195-001
	DISCONTINUED
Battery RTC XL	149344-001


SLT 386s/20

MEMORY UPGRADE CHART


ASSY NO. 001382
2 MEGABYTES STANDARD MEMORY

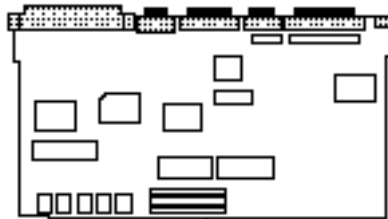


ADD ANY COMBINATION OF:

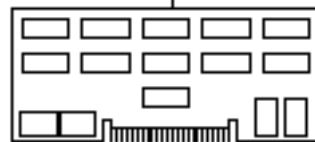

2-MB MEMORY MODULE
SPARE PN 118356-001

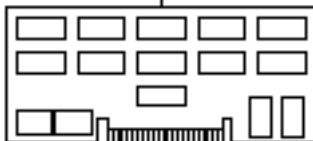

1-MB MEMORY MODULE
SPARE PN 118357-001

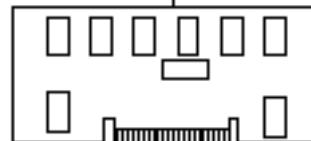

4-MB MEMORY MODULE
SPARE PN 118358-001

MAXIMUM MEMORY: 14 MB